

This Microphone Is Our Company Design With Meticulous Care, Adopting To Import The Microphone Computer Electric Circuit, Passing The Figures Plait Distance Handles,marking To Have The Soft And Figures Plait Distance Handles,making To Have The Soft And Beautiful Prelude Music Hint The Function, establishing At The Same Time The Conversion Show The Switch,can Comvert Into Have The Prelude Music,using 9v Battery,vivid Convenience,high And Intelligent Degree,having A Smooth Audio Rang,the Characteristic With The Ideal Heart-style Pointing,the Voice Is Special Clear,brightness,novel Features,beautiful Generous. In Keeping With Every Kind Of Meeting, Lecture, public Broadcast Etc.

Olight Is Bright, having No Music Voice, then Toward The Words On Microphone And Regulate Amplifier Mic In The Minimum Position Or Principal Tones The Deal The Knob To Volume Enough, and Not Howl, press The Front-panel Switch When The Talk Be Over, instruction The Light Isn't Bright, having No Music Voice, the Microphone Stops To Work.

## OPERATION:

- link Up The Audio Frequency Line, along side Of To Amplifier Equipments Mic Socket.
- qlace The Amplifier Equipment Mic Knob In The Minimum
  Position, (measures The Principal Tone To Knob To Place If
  Establish To Have No That Knob, in The Minimum Position).

- Press Battery In The Box Pole To Scribble, pack Into The 9v Battery, Link Up The Audio Frequency Line, Alongside Of To Amplifier Equipments Mic Socket.
- 4. Pull Out Microphone Base Conversion Switch To The "on" position, Then Press The Front-panel Switch, this Time Designation The Light Is Bright, hearing At The Same Time, the Soft And Beautiful Prelude Music, then Toward The Words On Microphone And Regulate Amplifier Mic In The Minimum Position Or Principal Tones The Deal The Knob To Volume Enough, and Not Howl, press The Front-panel Swritch When The Talk Be Over, the Audibility Arrives Soft, this Time, instruction The Light Put Out Immediately, microphone Ston To Work.
- Pull Out Microphone Base Conversion Switch To The "off" position, then Press The Front-panel Switch, this Time Designation The

| 1 |  | 7 2 | 2 |
|---|--|-----|---|