



FEATURES


1. Can play DVD/VCD/CD/Mp3
2. Auto play control, digital servo
3. I²C bus control, can be controlled by INTELLIGENT BROADCAST SYSTEM CONTROLLER
4. Can be extended to 8 purchaSe

FRONT PANEL



- | | |
|-----------------------|---------------|
| 1 Power | 6 Play/pause |
| 2 Power LED indicator | 7 Stop/return |
| 3 Disc tray | 8 Previous |
| 4 Fluorescent display | 9 Next |
| 5 Open/close | |

REAR PANEL

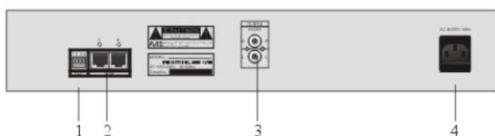

- | | |
|-----------------------------|-----------------------|
| 1 Selection of address code | 3 Audio signal output |
| 2 Control signal input | 4 AC power connector |

OPERATING

- 1 Press "POWER" switch on the power.
- 2 Press "OPEN/CLOSE", open the disc tray
- 3 Put the disc on the tray.
- 4 Press "OPEN/CLOSE", close the disc tray.
- 5 The PLAYER begins to read and play the disc
 - ▶ || PLAY / PAUSE
 - STOP / RETURN
 - ◀◀ The previous song
 - ▶▶ The next song

6 Auto playing:

Controlled by INTELLIGENT BROADCAST SYSTEM CONTROLLER, it can play the CD/MP3 automatically with many different methods such as: piece choosing, repeat, recycling etc. Please refer to OWNER MANUAL of INTELLIGENT BROADCAST SYSTEM CONTROLLER

AUDIO ADDRESS CODE SETTING

ADDRESS CODE	SWITCH 1	SWITCH 2	SWITCH 3	SWITCH 4	GRAPHIC
1	ON	ON	ON	OFF	
2	OFF	ON	ON	OFF	
3	ON	OFF	ON	OFF	
4	OFF	OFF	ON	OFF	
5	ON	ON	OFF	OFF	
6	OFF	ON	OFF	OFF	
7	ON	OFF	OFF	OFF	
8	OFF	OFF	OFF	OFF	

No.4 is "ON", stop playing after run the player

No.5 is "OFF", play repeatedly by automatic after run the player

REMARK:

This device is controlled by microcomputer. It cannot be turned on/off frequently. Some malfunctions may cause by static interference. Shut off the power, and turn it on again at least 5 seconds later, so that the microcomputer can reset.