

#### For safety....

⚠ This symbol, wherever it appears, alerts you to the presence of uninsulated hazardous voltage that may be sufficient to constitute a risk of electric shock. External wiring to any terminal marked with this symbol must be done by a trained and instructed person only.

⚠ This symbol, wherever it appears adjacent to a component, alerts you that the concerned component can only be replaced by another of the exact same specifications.

#### CAUTIONS AND NOTES

##### • WARNING

To reduce the risk of electronic shock, do not remove the top cover. No user serviceable parts inside. Refer all servicing to qualified personnel only. Before replacing any fuse, make sure the set is switched off and disconnected from the AC mains or any other of power source. Replace a fuse only with another of exactly same specification.

##### CAUTIONS

- **Power Source:** The voltage & frequency of the AC mains supply, and the voltage of the external battery, (if applicable) to which this set can be connected, is marked on the rear panel of the set. Do not connect this set to any power source other than those specified on the rear panel.
- **Power cord Protection:** Do not cut, kink, damage or modify the AC power cord supplied with this set. Keep the AC power cord away from heaters and harmful chemicals. Do not keep any heavy object on the power cord.
- **Operation on Generator:** When operating this set on a generator, make sure the set is switched off till the generator voltage has stabilized.
- **Ventilation:** This set should be situated so that its location or position does not interfere with its proper ventilation. Do not cover the ventilation holes / slots. Do not insert or drop anything into the ventilation holes / slots.
- **Stability:** This sets must kept in a stable and flat horizontal position, and never in a tilted position. Do not place this set on an unstable stand, tripod, bracket or mount, do not use attachments which are not supplied or explicitly recommended by the manufacture.
- **Earthing:** This set must be earthed properly before use. A wire from the Earth terminal on the rear panel must be connected to electrical earth.
- **Exposure to Heat:** Do not touch the heat sinks while the set is working.

*DO NOT disassemble the unit since there are no user serviceable parts inside.*



## SPA 8800 Amplifier

903 0005

## User Manual


## SPA 8800 AMPLIFIER

### Features:

- (1): Bluetooth receiver module, usb plug.
- (2): 4-zone 70v output.
- (3): 70v/100v/4-16Ω single line output.
- (4): 3 MIC input, 2 AUX audio input, 1 audio output.
- (5): Automatic thermal, overload, circuit protection.
- (6): EQ with treble and bass adjustment.
- (7): Distortion/clipping indicators.
- (8): Standard 2U chassis.



- ① Power Switch
- ② USB disk Input
- ③ SD Input
- ④ MIC Input
- ⑤ MIC1 Volume Adjustment
- ⑥ MIC2 Volume Adjustment
- ⑦ MIC3 Volume Adjustment
- ⑧ AUX1 Volume Adjustment
- ⑨ AUX2 Volume Adjustment
- ⑩ BASS tuning
- ⑪ TREBLE tuning
- ⑫ LED Display
- ⑬ FM/SD/USB Control
- ⑭ LCD Display
- ⑮ Partition indicator light/Partition volume

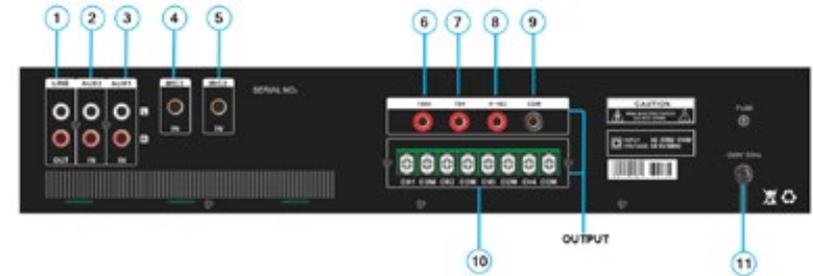

- ① LINE Output
- ② AUX 2 Input
- ③ AUX 1 Input
- ④ MIC 3 Input
- ⑤ MIC 2 Input
- ⑥ 100v Output terminal
- ⑦ 70v Output terminal
- ⑧ 4-16Ω Output terminal
- ⑨ Common terminal
- ⑩ Zone 1-4 Terminals
- ⑪ AC Power Line

### Product parameters

Model	<b>SPA 8800</b>
Line voltage	70-100V
Impedance	4-16Ω
Rated power	<b>850W</b>
Zoning	4
Dimension	485 X 445 X 90