

# P2P Clever Access 2.0 Configuration Guide

## CONFIGURATION IN THE READER

1 – Enter **Menu / Communication / P2P Setting**

Communication	
Communication Password	No
Event Transfer Mode	TCP/IP
Host PC Addr	192.168.001.207
Host PC Port	5005
P2P Setting >	

2 – Verify that the IP of the P2P server is: **190.64.80.98**, otherwise modify it.

P2P Setting	
P2P IP Server	<b>190.64.80.98</b>
P2P Server Port	4000
Unique Device ID	<b>1234567812345678</b>
Link Status	Registered

3 – Press **Escape** until you exit the Menu.

## Clever Access 2.0 Software Configuration

1 – Device Configuration / Device / Device Configuration

2 – New

3 – Select **Model: SAC 3604V2, SAC 3604P or SAC 3722P**

4 – Add **IP Address: 190.64.80.98**

5 – Add **Port: 4000**

6 – Select **Connection Type: P2P**

7 – Enter without the hyphen and all together the **UniqueID** code (found in the reader in **Communication / P2P Setting**.)

P2P Setting

P2P IP Server  
**190.64.80.98**

P2P Server Port  
4000

Unique Device ID  
\*\*\*\*\*

Link Status  
Registered

Device Configuration

Search IP

Auto Search New Edit Save Delete Cancel

Double Click for edit and Escape for cancel

No	Model	Name	IPAddress	MachineID	Port	Comm Key	Door Name	Direction	ConnectionType	Device Type	UniqueID
1	SAC3722P	Device 1	190.64.80.98	1	4000	0	MainDoor	IN_OUT	P2P	Attendance...	1234567812345678

8 – Click **Save**

After completing the indicated configuration, communication will be established between the reader and the software through P2P, therefore, you can start using the software normally.

**Observation:** In case the enrolled reader is in a different **Time Zone** than the PC that has the Clever Access 2.0 software, the option should be disabled:

**SETTING / SET STARTUP OPTION / Synchronize Device datetime with server datetime.**

In this way, the software will not modify the time in the reader.