




*PRO 3000G*

902 92109

**User Manual**

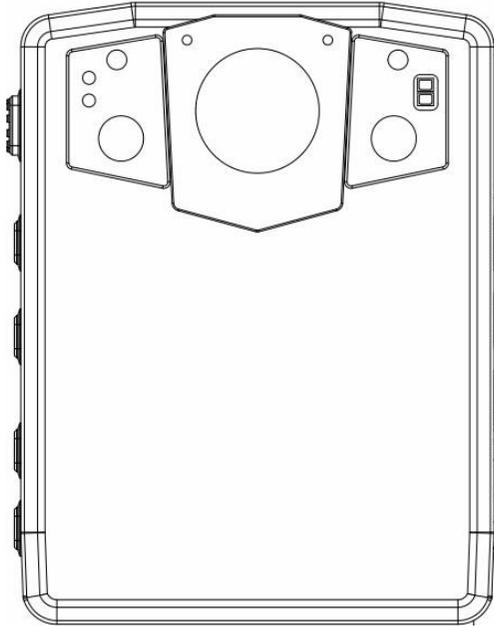

## **PRO 3000G**

### **Law Enforcement Audio&Video Recorder**

# Content

---

|                            |       |
|----------------------------|-------|
| Preface.....               | 03    |
| Structure and diagram..... | 04    |
| Button instruction .....   | 05    |
| Main specification .....   | 06    |
| Quick use.....             | 07-13 |
| Trouble shooting.....      | 14    |
| .                          |       |
| Warranty statement.....    | 15    |
| .                          |       |
| Warranty card.....         | 16    |



## ***PREFACE***

We sincerely thank you for using our company's new product---police mobile camera .This manual is the introduction of this product which briefly introduces its functions、 features、 performance 、 external structure 、 operation and caution items as a reference for users' convenience. Before using the camera, please read the user manual carefully and keep properly.


### **●Warning:**

- ①Far away from fire.
- ②Avoiding put LCD screen and video's camera directly under the sun.
- ③Do not disassemble the device without authorization.
- ④Pls use the original accessories from the manufacturer .

### **●Cautions:**

- ①Before using the camera,pls tear off the protective film on the screen.
- ②Pls charge full the battery and install it properly before use .
- ③Specific frequencies of electromagnetic waves may affect image quality.
- ④Before you use the product to work,pls do a test in order to master the use of video .

## Structure and diagram >>>

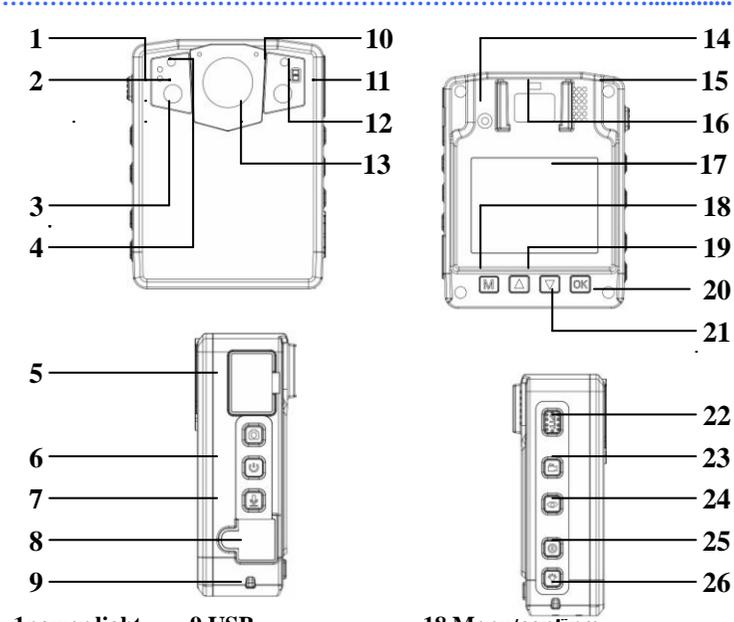

**1**power light

**2**work light

**3** IR LED

**4** laser

**5** expansion

**6** photo

**7**power on /off

**8** audio

**9** USB

**10** microphone

**11** white light

**13** camera

**14** reset button

**15** speaker

**16** clip

**17** screen

**18** Menu/confirm

**19** up

**20** ESC

**21** down

**23** video

**24** IR

**25** mark

**26** alarm

**Button instruction>>**

| No | Button name  | Function                         |
|----|--|----------------------------------|
| 1  | Power indicator light  | Charging in red,standby in green |
| 2  | Work indicator light   | Recording flashing in red        |
| 5  | External expansion   | Plug in mini camera              |
| 6  | 【  】 button   | photo                            |
| 7  | 【  】 button   | Turn on/off /sleep               |
| 8  | 【  】 button   | Audio                            |
| 9  | USB port   | Charge and data transmission     |
| 14 | 【reset】 button   | Factory setting                  |
| 19 | 【  】 button  | Up/zoom out                      |
| 21 | 【  】 button | Down/zoom in                     |
| 23 | 【  】 button | recording                        |
| 24 | 【  】 button | IR light /laser light            |

## Main specification>>>

|                      |  |                                |
|----------------------|--|--------------------------------|
| Video pixel          | 2304X1296-30P<br>1280X720-60P            | 1920X1080P-30P<br>1280X720-30P |
| watermark            | support (user ID、 date、 time)            |                                |
| Camera pixel         | 34M(7696X4329 16:9)                      |                                |
| Work time            | 10-12hours                               |                                |
| Memory card          | option 16G 32G 64G 128G                  |                                |
| <b>Camera</b>        |  |                                |
| lens                 | 170 °                                    |                                |
| Night vision         | 10M                                      |                                |
| <b>Battery</b>       |  |                                |
| Type                 | Built in 3000-3600mAH battery            |                                |
| Charge time          | 3hours                                   |                                |
| <b>Other</b>         |  |                                |
| ID number            | 5 digits device ID and 6 digits polce ID |                                |
| Encryption           | support                                  |                                |
| Size                 | 78 * 59 * 27.5cm                         |                                |
| N.W .                | 110g                                     |                                |
| Screen               | 2inch                                    |                                |
| <b>Accessories</b>   |  |                                |
| Standard Accessories | USB cable ,adaptor,user manual ,clip     |                                |

## Quick Use>>>

### 1.Power on/off


1) Shortly press the power button  of camera ,the device will be turned on and enter the standby mode. Under any circumstance, press the power button  for 3 seconds,the equipment will be powered off.

### 2. Sleep screen mode

After turned on, in the mode of preview/recording, short press the  button to enter into save-power screen mode, the device still working ,just the screen in black to save power. Press the  button again ,the screen will be lighted up.

### 3. Reset function

Short press the reset button to reset factory setting when device malfunction.

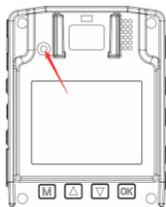

#### **4. IR Night vision function**

##### **\*Manual IR function**

1) Shortly press the IR button, you can manually turn on / off infrared light when in ambient low outside light situations, the video will be in black and white colour .

##### **\*Auto IR function**

2) If set the IR automatically, the infrared light will automatically turn on when in low-light environments.

#### **5. Photograph**

1) After turned on, the equipment will directly enter the preview mode, press directly the  button to shoot photos.

2) Under the video-recording state, press the  button to capture the picture recorded at that time.

3) After turned on, in the mode of preview, press the  button to enter into the interface of parameters setting and select the option of auto shotting, 3, 5, or 10 photos at once.

#### **6. Recording**

1). Normal recording

After turned on, the device will directly enter the camera preview mode, directly press the  button to record, press it again, the device will stop and save the video.

2). One button recording

Under the power-off state, press the  button for 3seconds, the equipment will be turned on automatically and start the video-recording function, at this time, if needing to end and save the video, methods are same as above.

In case of shooting at dark night, press the IR button, then the IR light will be turned on and enter the night shooting mode, pictures shot at night are black and white



### 3)Pre-record & Delay-record

After turned on, in the mode of preview, press the  button to enter into the interface of parameters setting and select the option of Pre-record/delay-record. The device will pre-record 10secs before pressed the record button and keep on recording 10secs after end recording .

4 ) Video pixel is 2304x1296p-30p / 1920x1080p-30p/ 1280x720-60p /1280x720-30p, select the pixel in the menu .

### 5)Motion detection

Comes with a motion detection feature to allow for recording only when something happens.

After turned on, in the mode of preview, press the  button to enter into the interface of parameters setting and select the option of “motion detect” ,press to setting.

## 7. Sound recording

After turned on, the equipment will directly enter the camera preview mode, press directly the  button to record sound, the prompt that there is a picture under the sound-recording state will be displayed on the screen, press the  button again to end and save audio file.

## 8. Video,audio,photo playback

Under the standby state, press the  button,enter into the playback menu,the equipment will show the video/photo/audio files,then press the “UP/DOWN”button to choose the files,press the “”button to playback,press”  ” to end.

## 9.Laser pointer function

With the push of the  button a red laser can pin-point objects for the best positioning

## 10. GPS function (option)

After turn on ,set the GPS opened in the menu,will find a GPS icon on the scen same as picture .Then put the device outside for minutes to collect the GPS signal, simultaneously the GPS icon in brown colour ,it means the GPS is working properly.When the

icon in green colour,the GPS location is ok now ,you will see the longitude and latitude in the preview screen .



### **11.External mini camera (option)**

1) Plug the mini camera into AV IN port ,support use the mini camera recording .


### **12.Charging methods**

1)Connected the DVR with the adaptor and charging .

2)Plug into the desktop charger,then connect with the adaptor and charging . (option accessories)

3)Put the battery into the desktop charger ,then connect with the adaptor and charging, you can also to charge both an extra battery and the camera simultaneously .(option accessories)




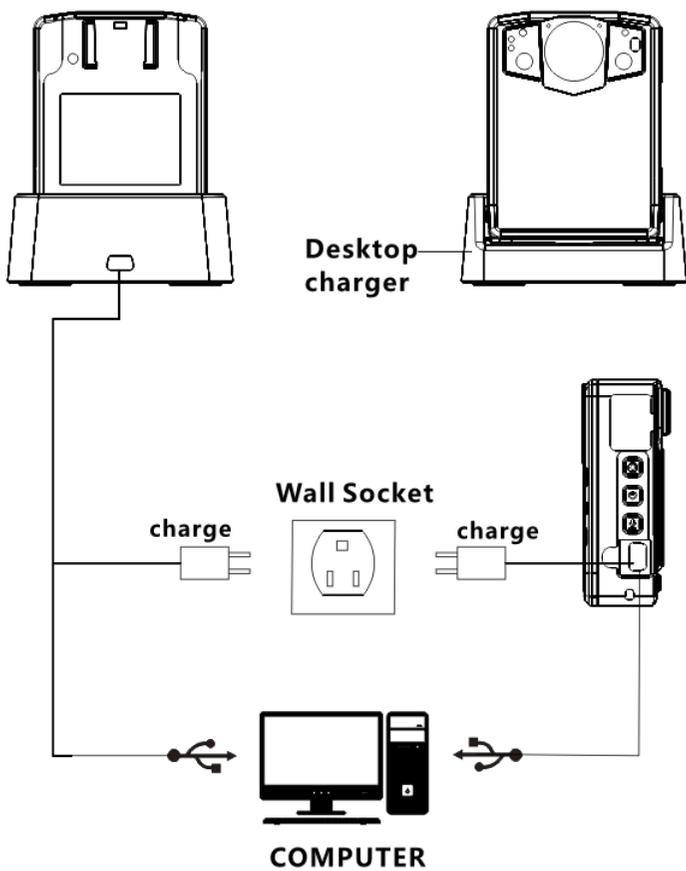

### 13. Management

After turn on the camera ,connect it to the computer ,enter the password 000000 into the device screen ,same as below picture .

Enter U DISK mode directly ,find the camera disk in your PC and read all the video files .

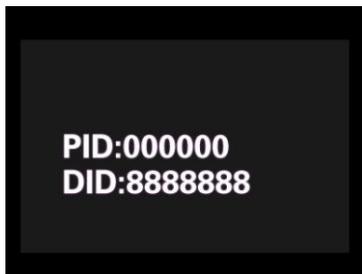

Enter U DISK mode

## Troubleshooting>>>

| Trouble                               | Possible causes                    | Solution   |
|---------------------------------------|------------------------------------|--|
| Can't power on                        | Battery is empty                   | Charge 3.5hours  |
|                                       | Mainboard automatic protection     | Press <b>【reset】</b> button  |
|                                       |                                    | Connect the camera with computer ,insertion and extraction the camera repeatedly |
| Working time short                    | undercharge                        | Charge the camera more than 3.5hours   |
| Data transmission failed              | Power of front panel is not enough | Use the USB port of back panel   |
| DVR is not recognized by the computer | USB cable broken                   | Change new USB cable   |

**Warranty statement>>>**

1.Any one of the following user will not be able to enjoy the commitment of the company's warranty policy

\* Product was non-normal use

\*Non-normal storage conditions, exposed to the humid environment

\* Exposed to the temperature too high or too low temperature

\*Unauthorized repair, misuse, negligence, abuse,accident, alteration

\* Damage caused by force majeure (fire, accidents, etc.)

\*Food or liquid splash caused damage

\*Products of non-normal wear and tear

\*Beyond the period of quality assurance

2.Camera warranty is 1 year ,accessories warranty is 3 months

3.More than the quality of the product warranty period,the company will carry out repairs,you will cover the incremental cost