



3) The following window appears, the controller asks for a **Username** and **Password** to access the configuration.

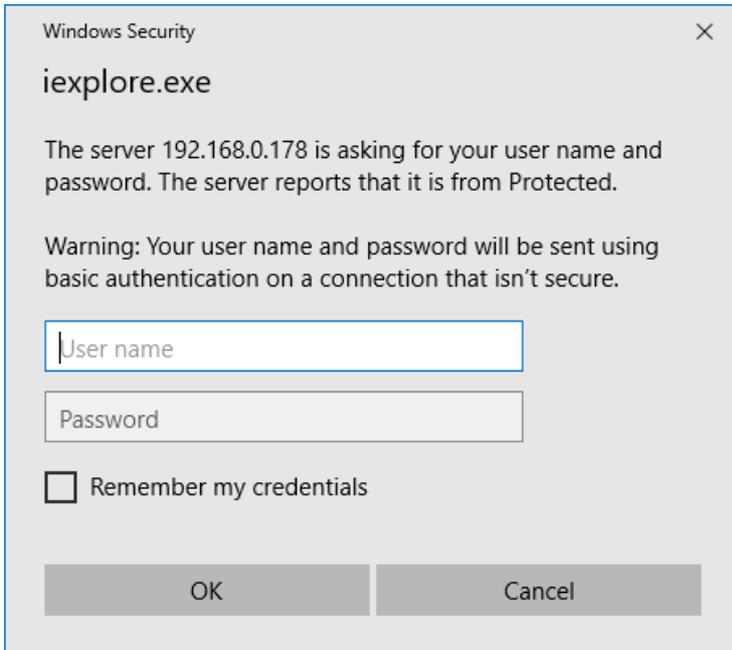

4) Enter as **User: admin** and as **Password: 888888**

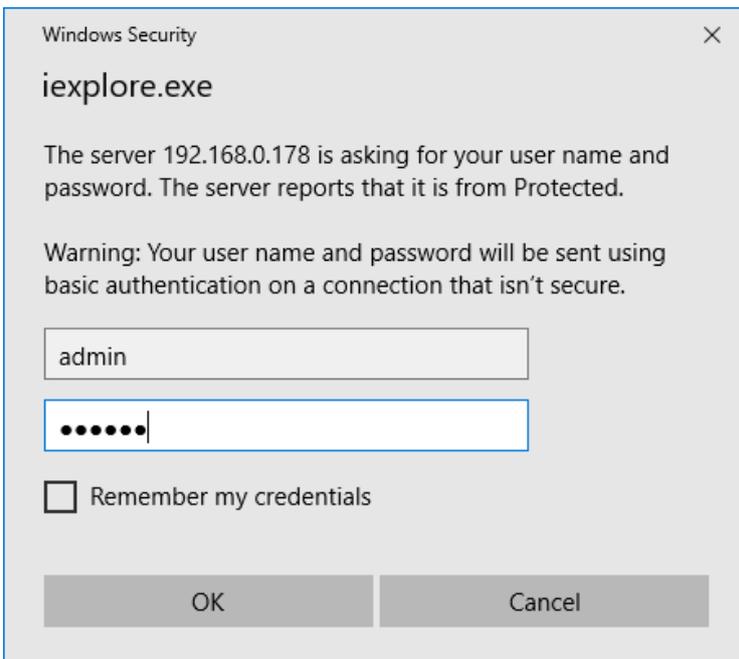

5) Click **OK**

6) The following window is displayed:

Sierra SAC 3000 Access Controllers

Console
Parameter
Door
485 Reader
Time Zone
Cards
Card Event
Alarm Event
Time
User
Network
Reset system
Reboot

Status
2000-00-00 00:00:00

Door1	Open	Close	Lock	Unlock
Door2	Open	Close	Lock	Unlock
Door3	Open	Close	Lock	Unlock
Door4	Open	Close	Lock	Unlock
Alarm	Alarm	Close Alarm		
Fire	Fire Alarm	Close FireAlarm		

Live Event

Time	Name	Card	Door	Direction	Event
------	------	------	------	-----------	-------

7) Click on **Network**

Sierra SAC

Console
Parameter
Door
485 Reader
Time Zone
Cards
Card Event
Alarm Event
Time
User
Network
Reset system
Reboot

Status
2000-00-00 00:00:00

Door1	Open	Close	Lock
Door2	Open	Close	Lock
Door3	Open	Close	Lock
Door4	Open	Close	Lock
Alarm	Alarm	Close Alarm	
Fire	Fire Alarm	Close FireAlarm	

Live Event

Time	Name	Card	Door
------	------	------	------

8) The **Network Configuration** window is displayed, with the indication of the IP of the controller.

Siera SAC

Network

Time: Oct 14 2019 17:18:58
Config: 4TCPDoor,TFTP,485 Box(WG+485),RS485,AES,REA
Serial: 4F9178
Version: 101
Memory: 45000/42000/12800
Mac: 00:04:A3:2A:11:19

Local

IP: (Unlink)
Port:
GateWay:
Mask:
DNS:

TCP model

Connect model: Controller is Client
Server:
Server's Port:

Other

AES128
AES PIN:

Note:Please restart system!

9) Modify the value of the controller IP, adapting it to the IP range of the Local Network, in this case it should be **192.168.1.178** and click on **SAVE**

Siera SAC

Network

Time: Oct 14 2019 17:18:58
Config: 4TCPDoor,TFTP,485 Box(WG+485),RS485,AES,REA
Serial: 4F9178
Version: 101
Memory: 45000/42000/12800
Mac: 00:04:A3:2A:11:19

Local

IP: (Unlink)
Port:
GateWay:
Mask:
DNS:

TCP model


Connect model: Controller is Client
Server:
Server's Port:

Other

AES128
AES PIN:

Note:Please restart system!

10) The following window is displayed, click the **Restart** button, to restart the controller.

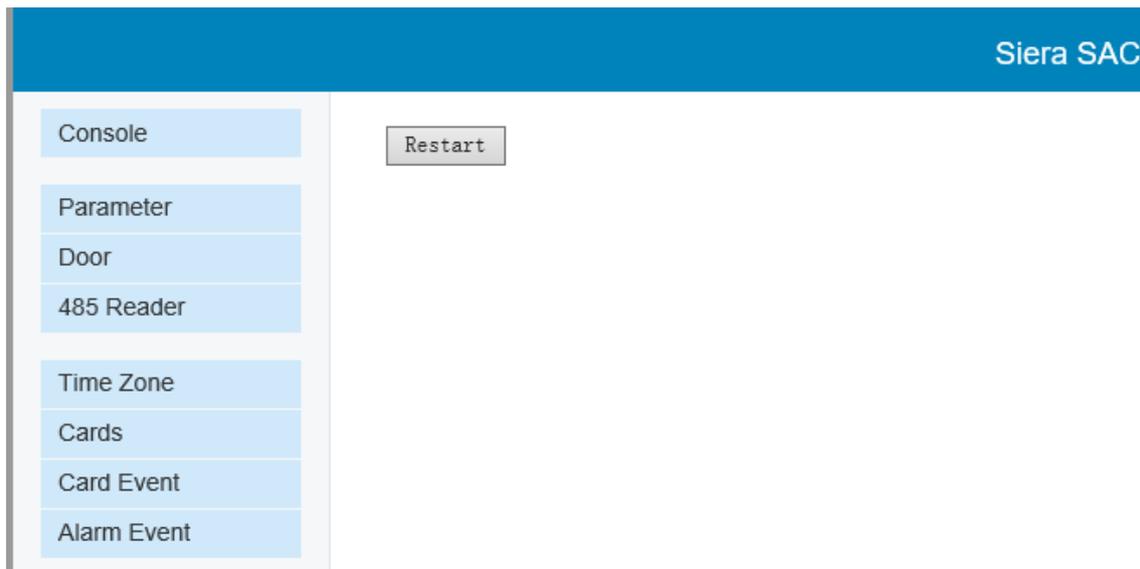

11) The browser window will close. Open the browser again to verify access to the controller, by the new IP. Can also be verified by pinging the new IP.

In this way, the IP range of the controller is changed.