


INTERLOCK CONFIGURATION GUIDE


In this guide we are going to indicate step by step the configurations of the Interlock between Door 1 and 2 of the SAC 3004IP and SAC 3008IP controllers with SAC 4000 software.

The interlock configuration refers to the fact that a user will not be allowed to open a second door, while the first door is open and vice versa

1) In the SAC 4000 software select the **Devices** icon, the controller is shown in the upper right window, select it, right click and select **Edit**.

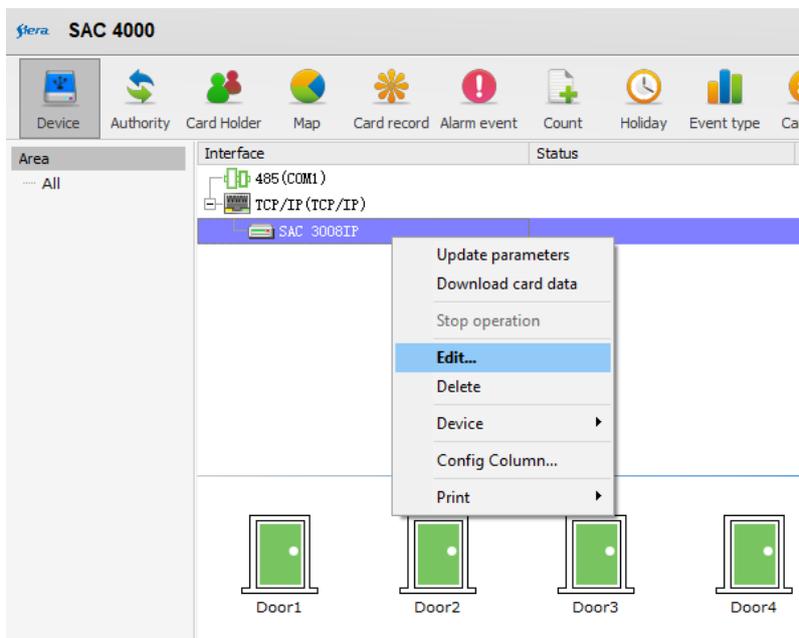

2) The following window opens, to edit the controller, click on **More**.

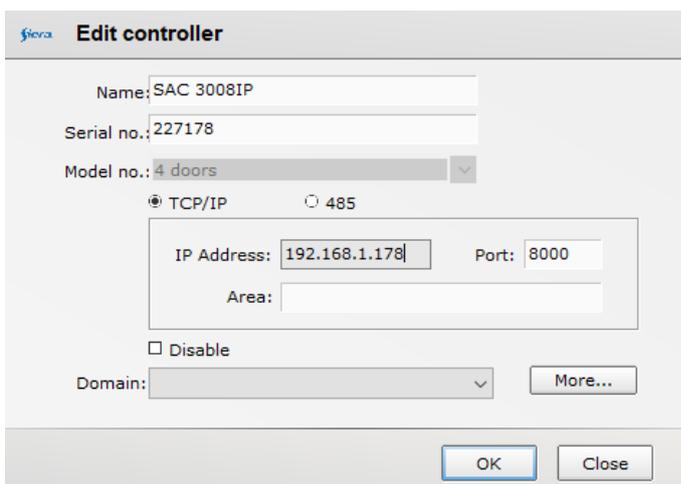

3) The following window opens, check the **Interlock Door 1-2** box.

The screenshot shows a software window titled "More controller data" with a Sierra logo. It contains several input fields and checkboxes. The "Anti pass back zone" field is set to "1". The "Alarm time" field is set to "10" with a note "(1-65535) 99 means no limitation". The "Fire alarm time" field is set to "99" with the same note. There are two checkboxes: "Interlock 1-2 door" which is checked, and "Interlock 3-4 door" which is unchecked. A "Duress password" field is empty. At the bottom right, there are "OK" and "Close" buttons.

Anti pass back zone:	1	
Alarm time:	10	(1-65535) 99 means no limitation
Fire alarm time:	99	(1-65535) 99 means no limitation
	<input checked="" type="checkbox"/>	Interlock 1-2 door
	<input type="checkbox"/>	Interlock 3-4 door
Duress password:		

4) Then click **OK**.

In this way, the interlock between doors 1 and 2 is configured.