




Change AHD/TVI/CVI of a camera by OSD from a DVR/HVR


Quick Help

1. Enter the main menu.

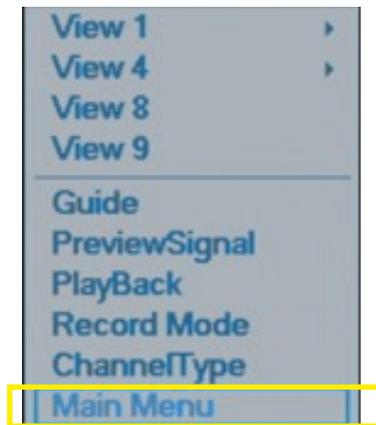

2. Enter the system with the user admin.


Remember that the factory password is siera

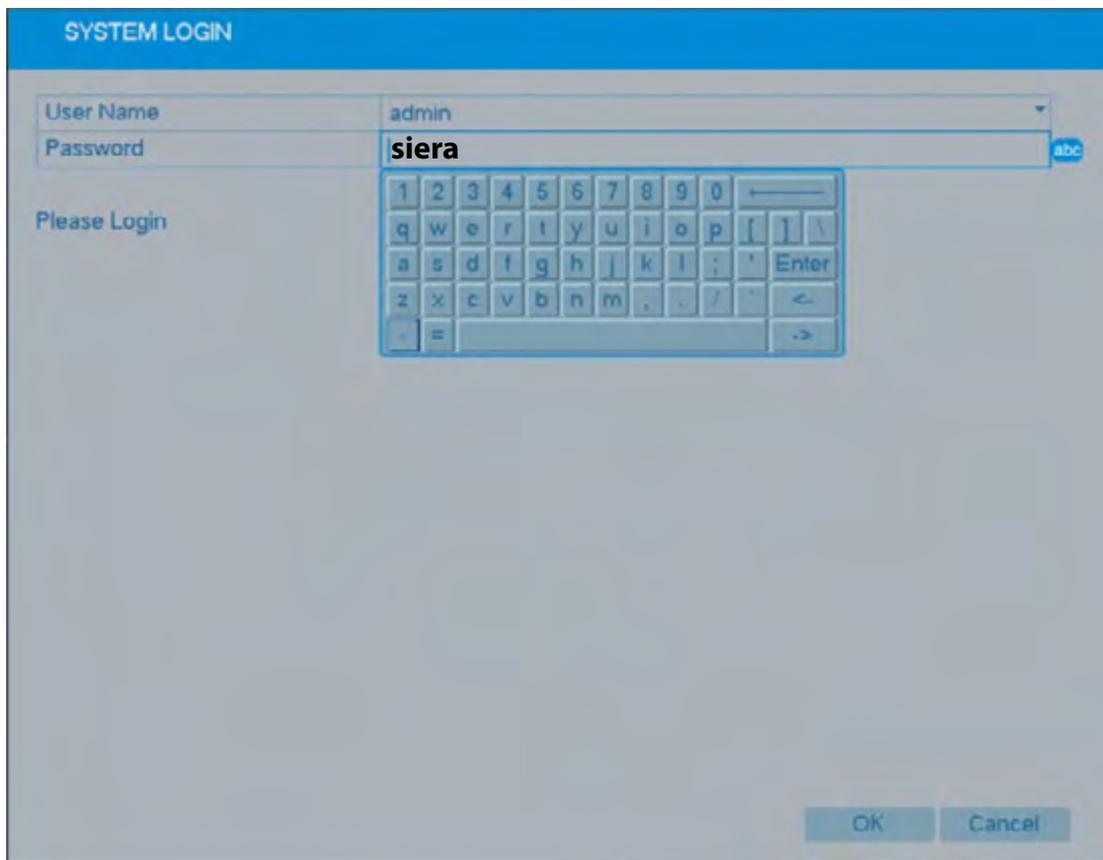

3. Enter "Video".



4. Enter "PTZ Config"

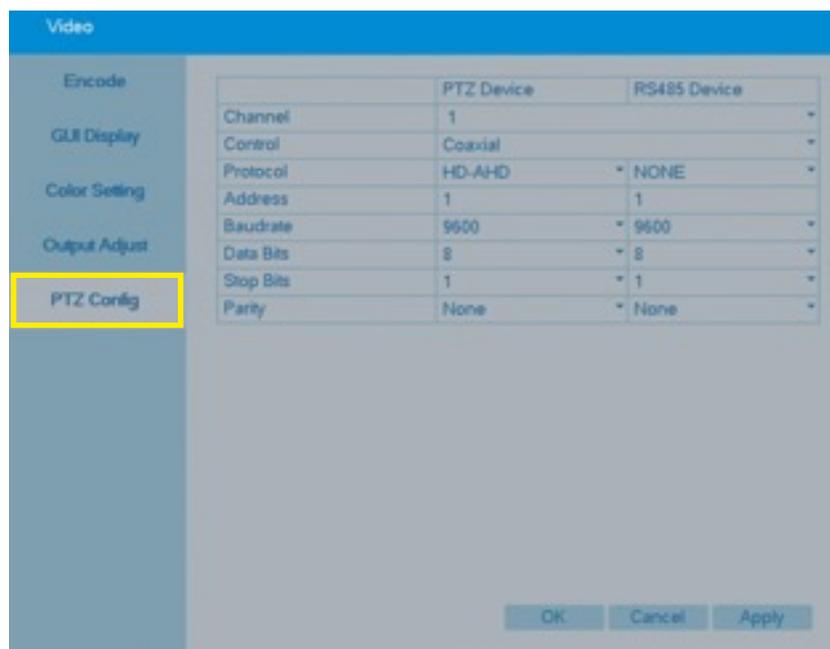


5. Select the channel where the camera to be programmed is connected and configure the same parameters as shown below in order to access the camera configuration via OSD.

Control	Coaxial	
Protocol	HD-FH	NONE
Address	1	1
Baudrate	9600	9600
Data Bits	8	8
Stop Bits	1	1
Parity	None	None

6. Exit the menu and display the camera in full screen. Then press "PTZ".




7. In the control menu shown below, press the central button.

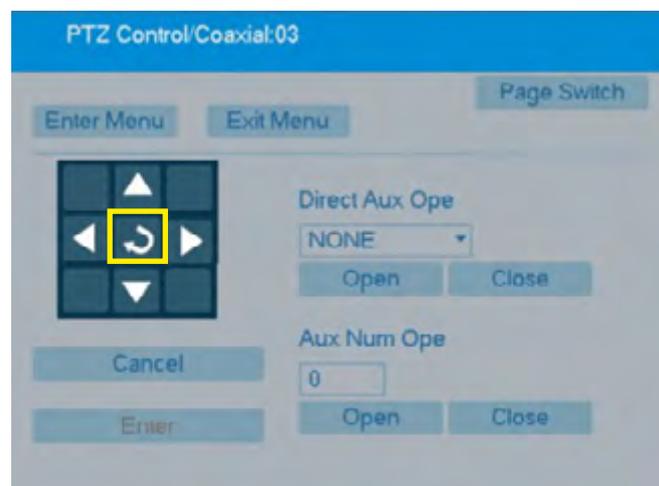

8. Once in the camera menu, use the arrow keys to scroll through the menu and the central button to accept. First access "ADJUST".



9. Enter "OUTPUT MODE".

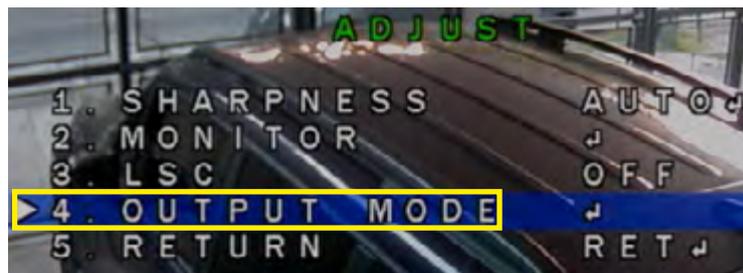

10. Select the desired mode, then return to initial.



11. Press "SAVE&END" to save the changes made.





sieraelectronics.com