




# Change administrator user password


**Quick Help**

**1. Enter the main menu.**

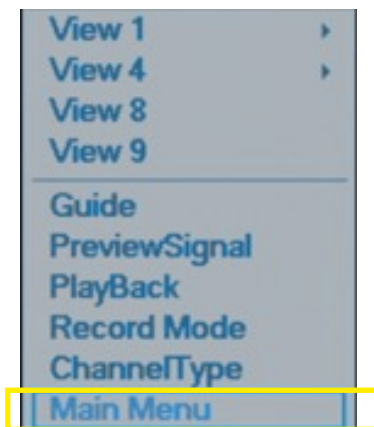

**2. Enter the system with the user admin.**


Remember that the factory password is siera

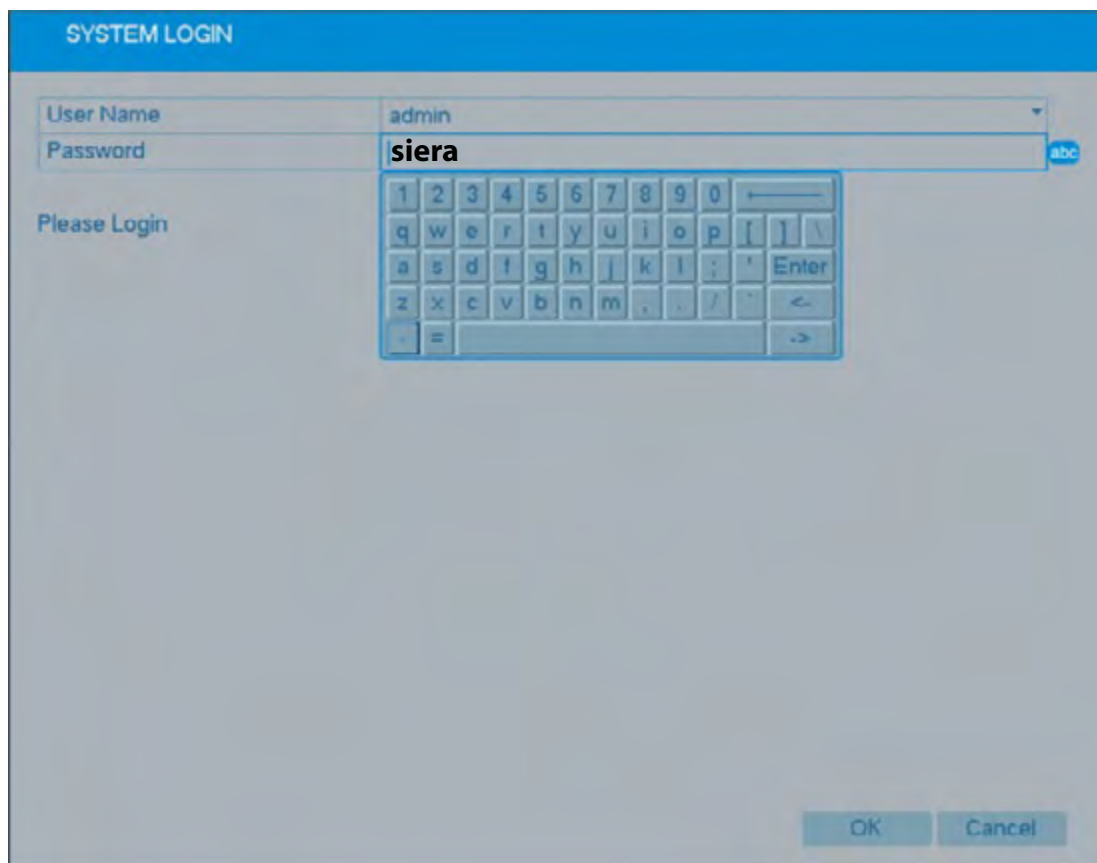


### 3. Enter "System".




### 4. Enter "Account".

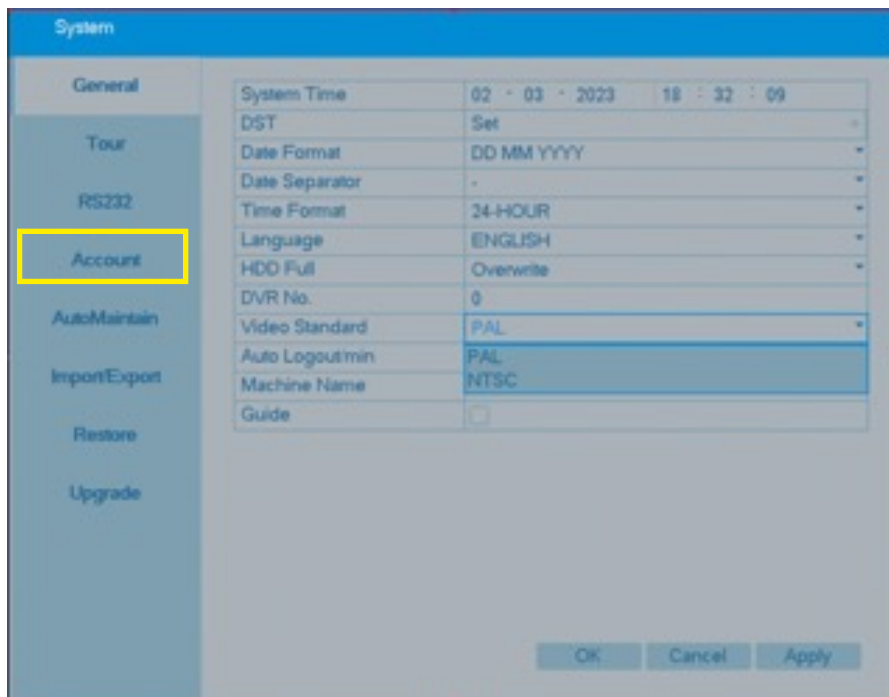


**5. Select the user “admin” and then select “Modify Pwd”.**

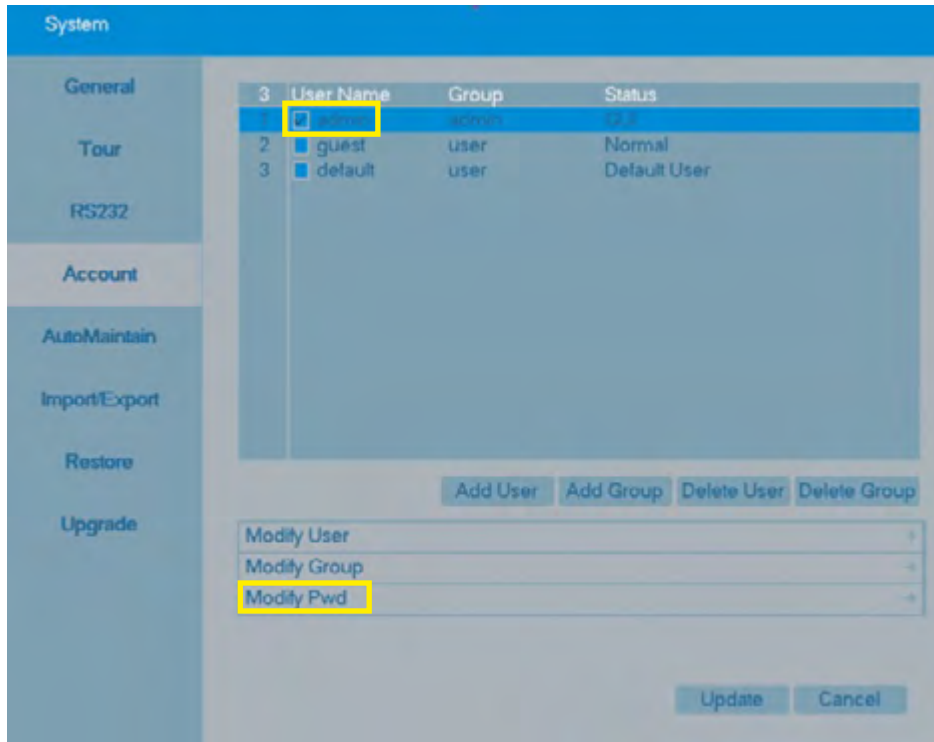

**6. The system will request to enter the current password (from the factory it is siera), and then to enter the new password and finally to confirm it. Finally, press “OK”.**

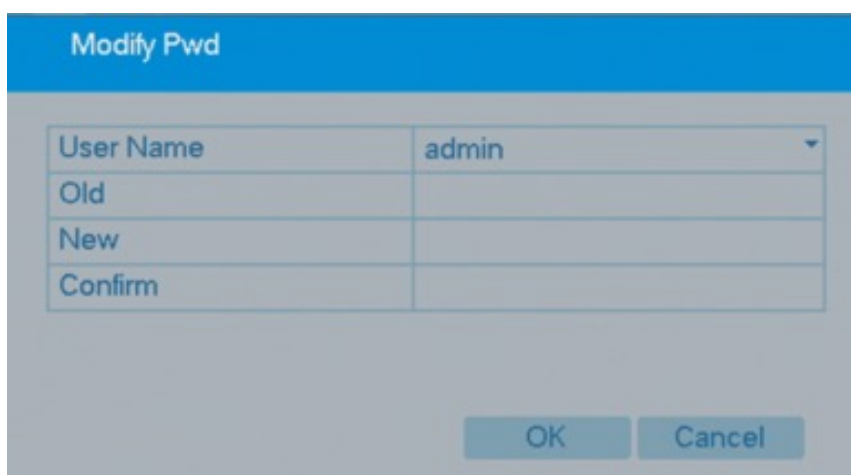

**7. If the process is carried out successfully, the system will show. Finally, press "OK".**

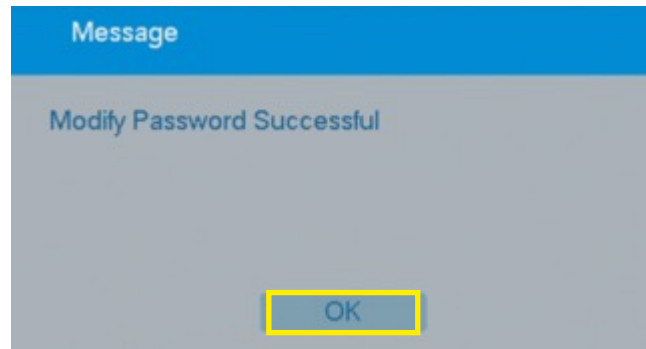

NOTE: It is recommended to reboot the system after changing the password.



*[sieraelectronics.com](http://sieraelectronics.com)*