





Configuration of alarm events in the VMS software

Quick Help


1. Enter the VMS software.

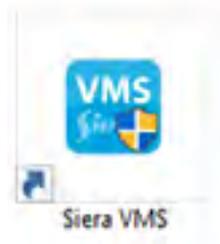

2. Enter "Event CFG".

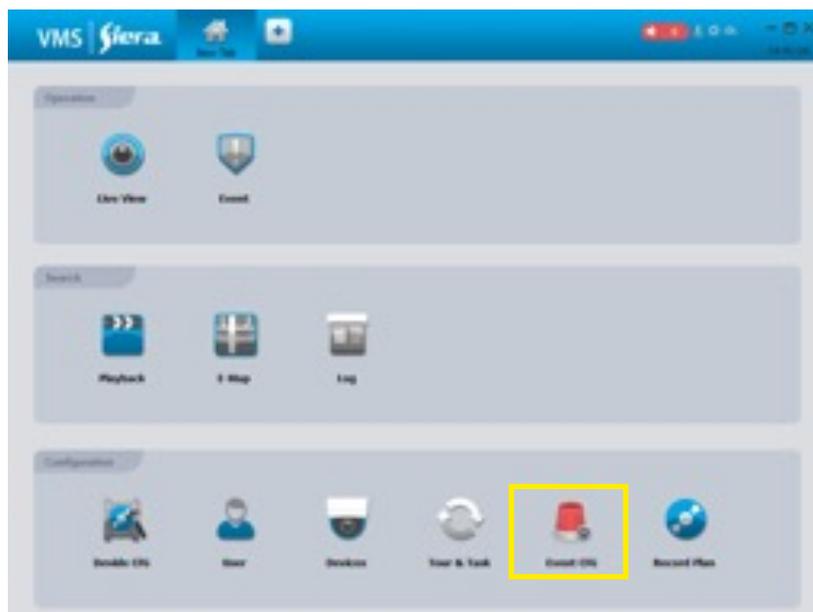

3. The following configuration screen will be displayed:

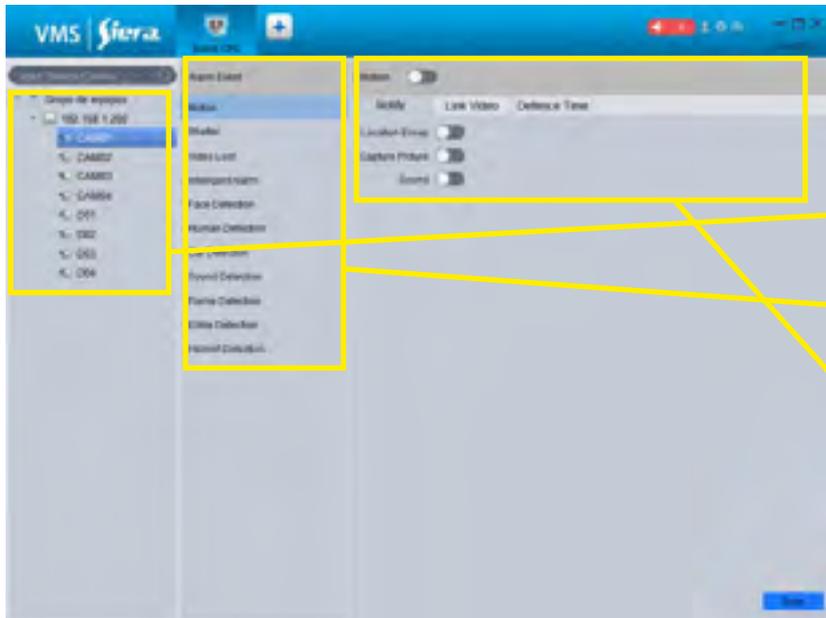


Here you will select the camera or I/O channel where the event comes from.

Here you will select the alarm event that will be notified in the software.

Here you configure how the VMS software will notify the event.

NOTE: It will depend on the model of the equipment if it supports these alarm events. The alarm event must first be configured on the equipment so that it can be received by the VMS software.

4. Configure the notification that the VMS will make when receiving the event.

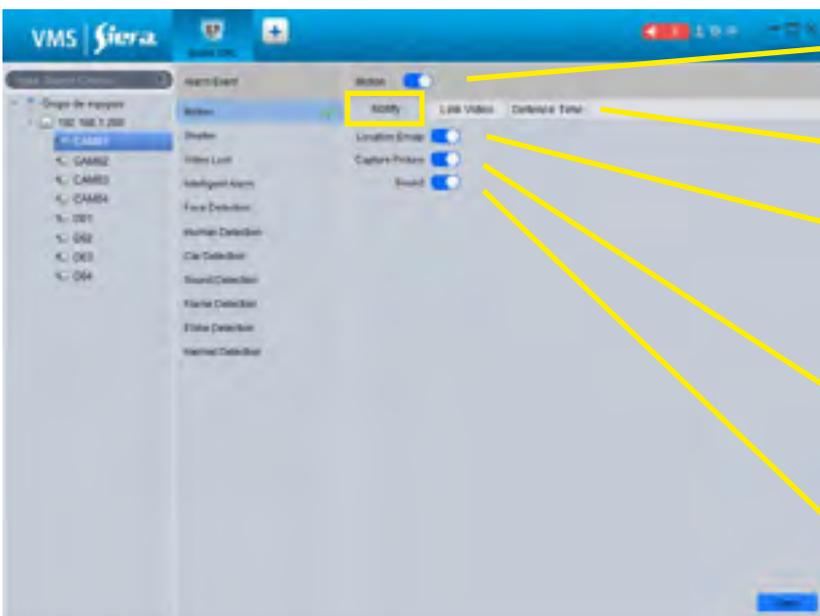

Enable the event.


Event action options in the VMS.

If you have configured the map in the VMS and this event is associated with a location, you can enable it to show it on the map when it is activated.

Enable if you want the VMS software to capture an image when an event occurs.

Enable if you want the VMS to make a sound when the event is triggered.


5. Configuration of the live Pop Up.

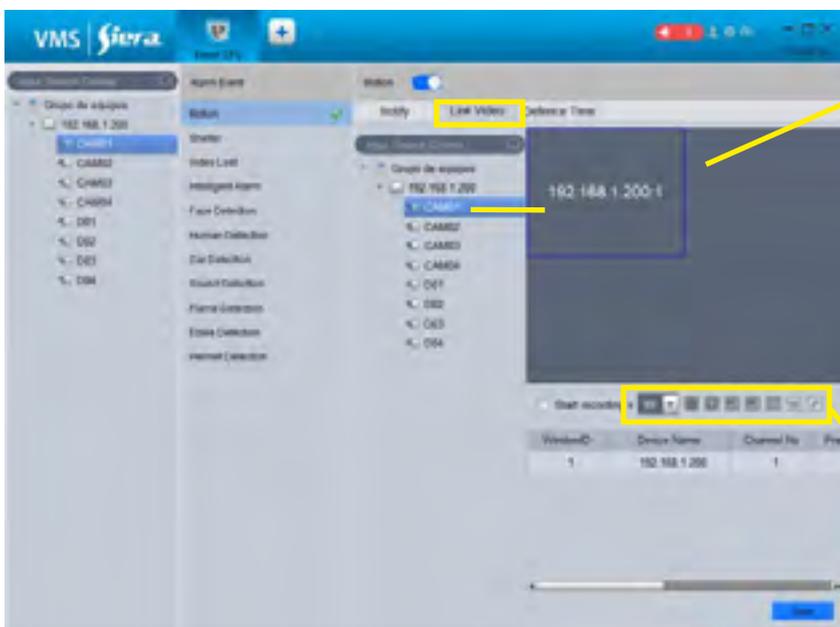

If you want the system to show a Pop Up when the event is activated, you must load the camera(s) you want to associate to the event in the view.

Select the configuration of the Pop Up view.

6. Configuration of the agenda in which notifications will be made for this event.

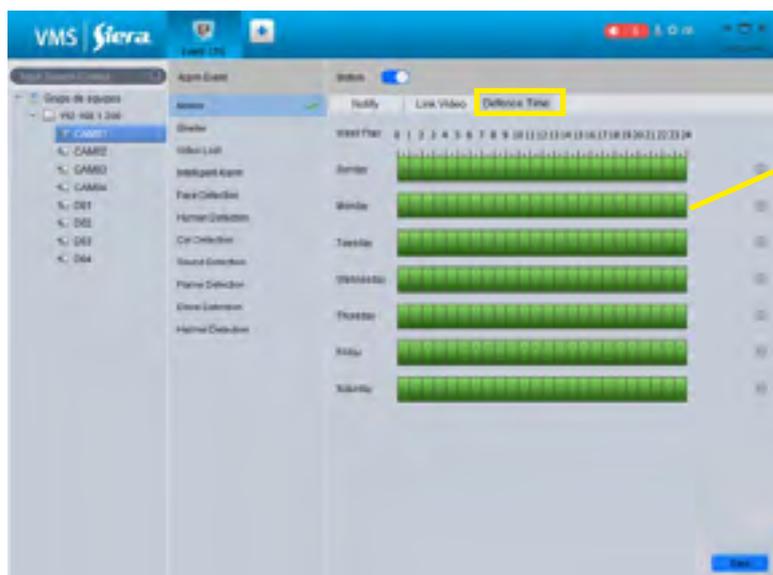

Seleccione la configuración de la vista del Pop Up.

7. Once the configuration is finished, select "Save".



sieraelectronics.com