




# Configure a PTZ dome by rs485 DVR/HVR


**Quick Help**

## 1. Enter the main menu.

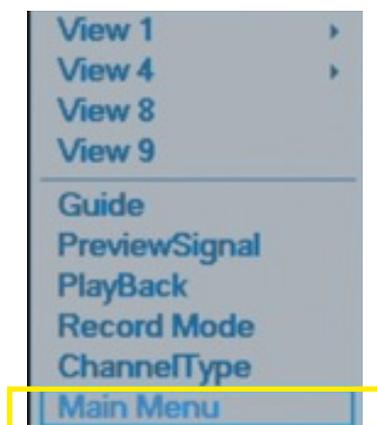


## 2. Enter the system with the user admin.


Remember that the factory password is siera.

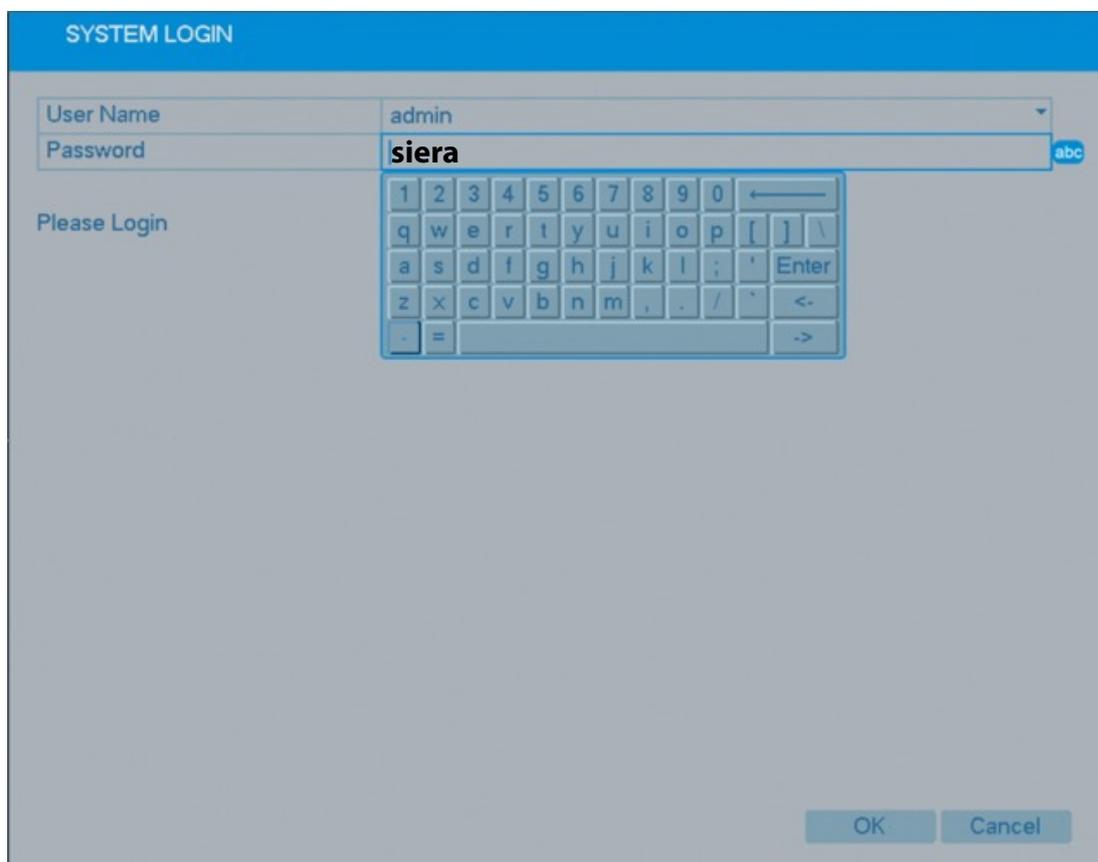

### 3. Enter "Video".

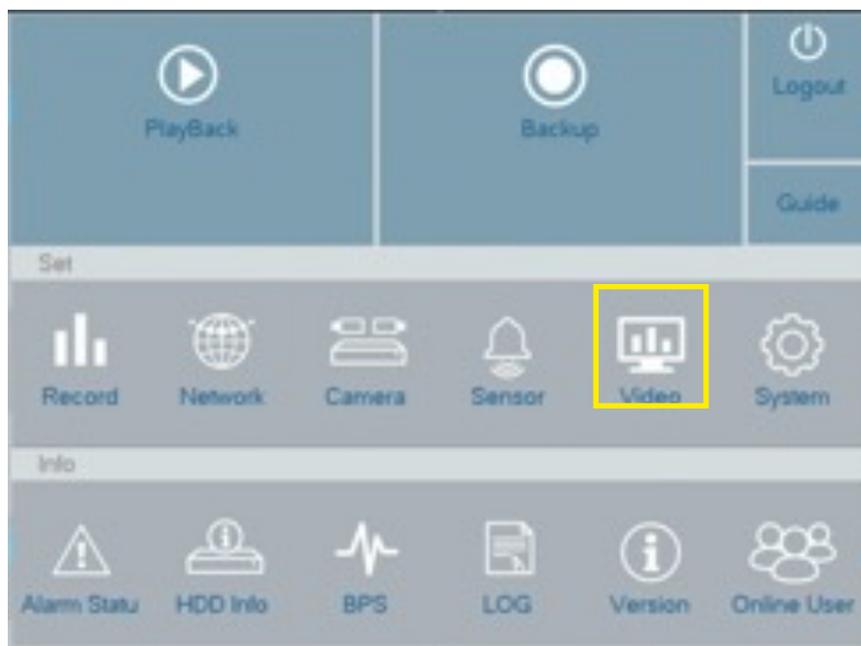

### 4. Enter "PTZ Config"

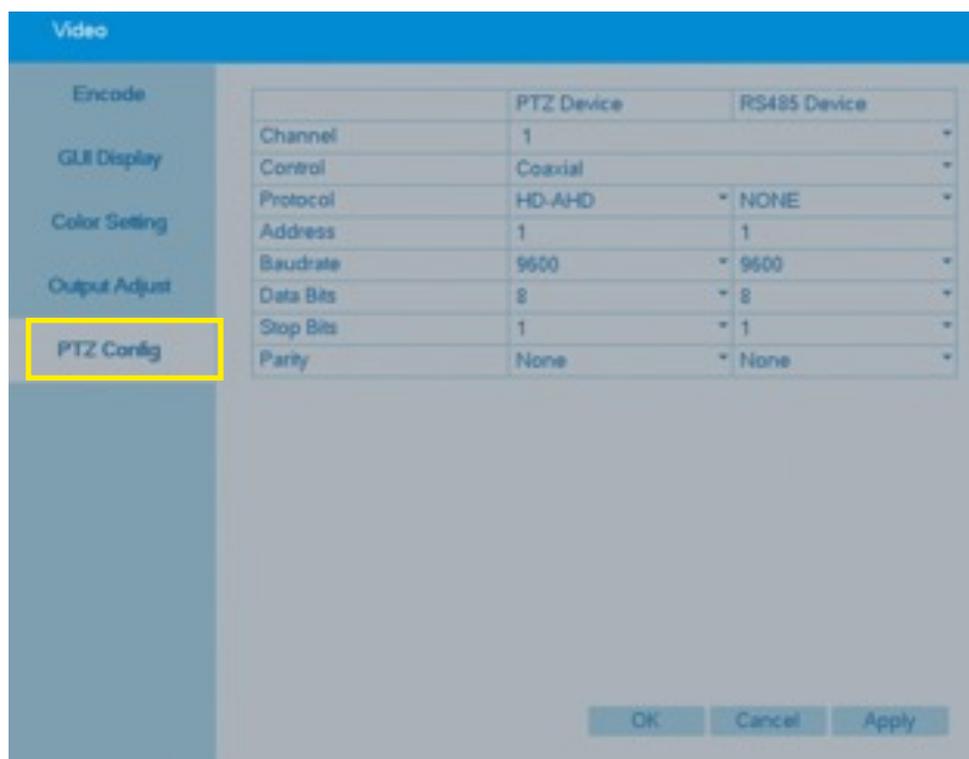

**5. Within this configuration you must configure the communication parameters that you will use with the camera.**


	PTZ Device	RS485 Device
Channel	1	
Control	Serial	
Protocol	PELCOO	NONE
Address	1	1
Baudrate	2400	2400
Data Bits	8	
Stop Bits	1	1
Parity	None	None

Video channel where the camera is connected.

Must be "serial" for RS485 communication

These data must be the same as those found in the camera.

**6. Once the configuration is finished, select "Apply" and then "OK".**

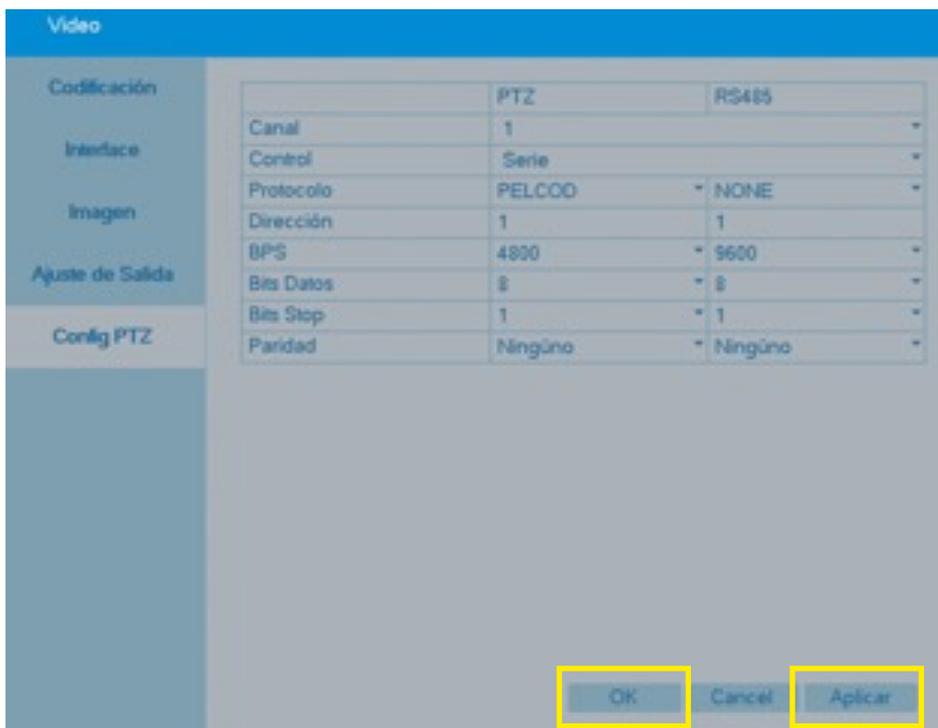

The screenshot shows a software interface for PTZ configuration. On the left, there is a sidebar with menu items: 'Codificación', 'Interfaz', 'Imagen', 'Ajuste de Salida', and 'Config PTZ'. The 'Config PTZ' section is active, displaying a table with the following data:

	PTZ	RS485
Canal	1	
Control	Serie	
Protocolo	PELCOO	NONE
Dirección	1	1
BPS	4800	9600
Bits Datos	8	8
Bits Stop	1	1
Paridad	Ninguno	Ninguno

At the bottom of the interface, three buttons are visible: 'OK', 'Cancel', and 'Aplicar'. The 'OK' and 'Aplicar' buttons are highlighted with yellow boxes.

**7. You can now control the camera by PTZ.**



[sieraelectronics.com](http://sieraelectronics.com)