




# Configuring an HVR/NVR/DVR in DHCP


**Quick Help**

### 1. Enter the main menu.

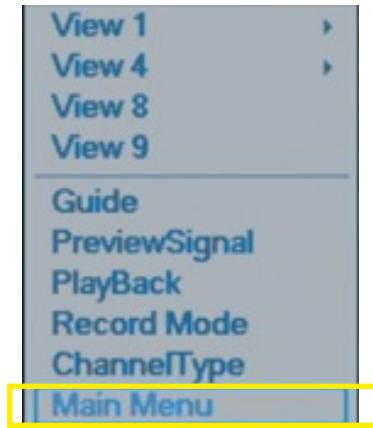


### 2. Enter the system with the user admin.


Remember that the factory password is siera

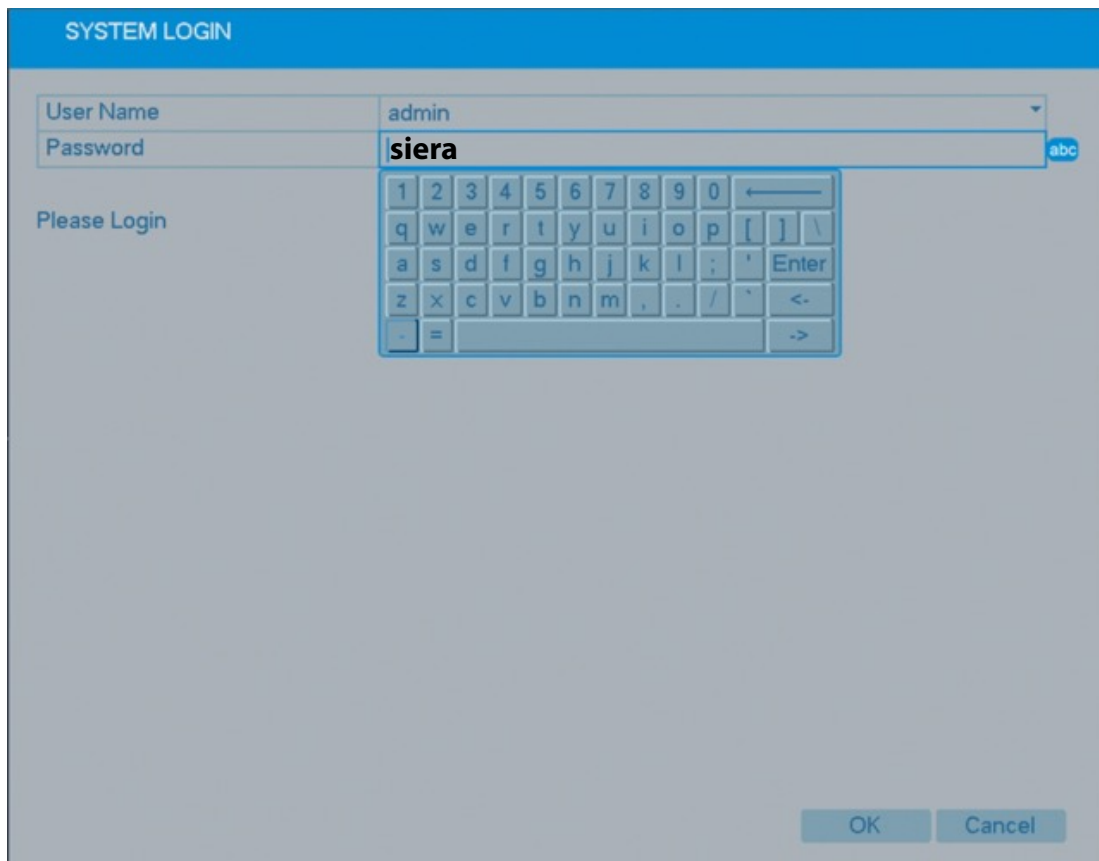

### 3. Enter "Network".

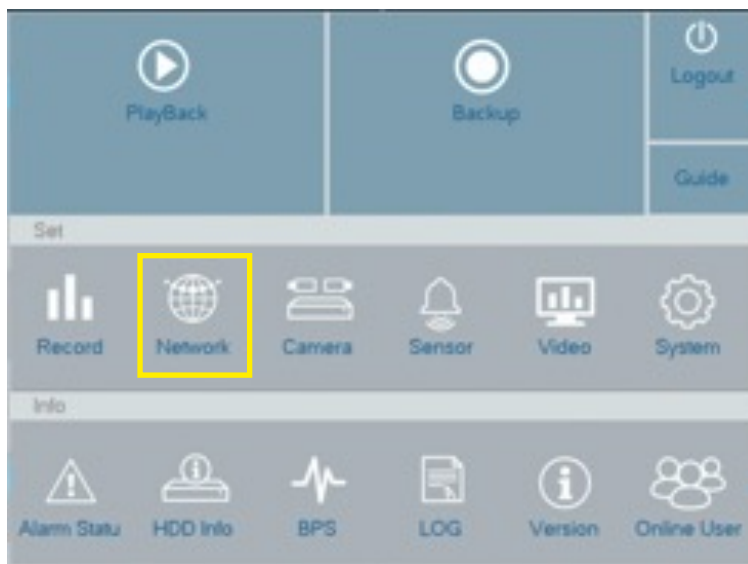

### 4. In "Network" the following options menu will be displayed, where you must activate DHCP and then select "Apply".

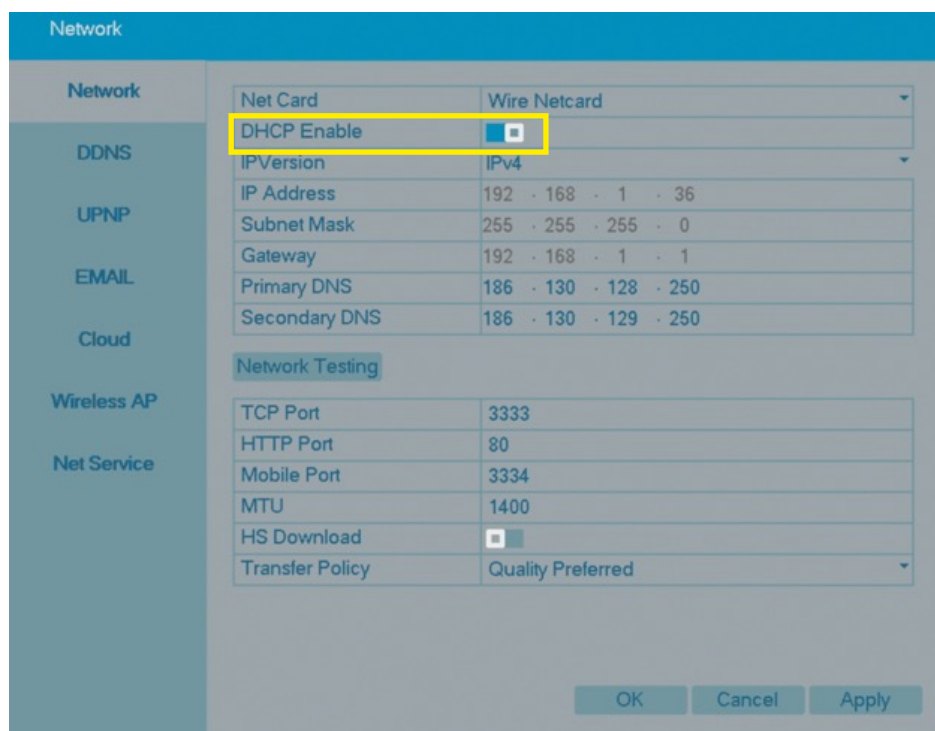


The screenshot shows the 'Network' configuration menu. The 'DHCP Enable' option is checked, indicated by a yellow box around the checkbox. The 'Apply' button is highlighted at the bottom right.

| Network     | Net Card        | Wire Netcard                        |
|-------------|-----------------|-------------------------------------|
|             |                 | Wire Netcard                        |
|             | DHCP Enable     | <input checked="" type="checkbox"/> |
| DDNS        | IPVersion       | IPv4                                |
| UPNP        | IP Address      | 192 · 168 · 1 · 36                  |
|             | Subnet Mask     | 255 · 255 · 255 · 0                 |
|             | Gateway         | 192 · 168 · 1 · 1                   |
| EMAIL       | Primary DNS     | 186 · 130 · 128 · 250               |
|             | Secondary DNS   | 186 · 130 · 129 · 250               |
| Cloud       | Network Testing |                                     |
| Wireless AP | TCP Port        | 3333                                |
|             | HTTP Port       | 80                                  |
| Net Service | Mobile Port     | 3334                                |
|             | MTU             | 1400                                |
|             | HS Download     | <input type="checkbox"/>            |
|             | Transfer Policy | Quality Preferred                   |

OK Cancel Apply

**5. Finally, select “OK” and the device will be configured in DHCP.**

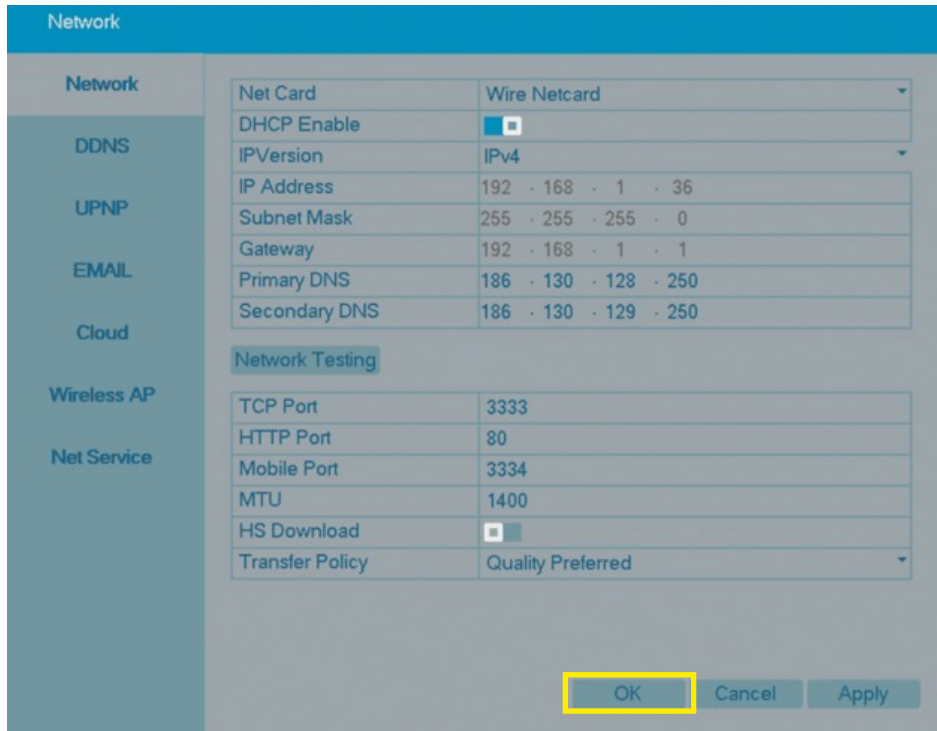

The image shows a network configuration window titled "Network". On the left is a sidebar with categories: Network, DDNS, UPNP, EMAIL, Cloud, Wireless AP, and Net Service. The main area contains the following settings:

|               |                                     |
|---------------|-------------------------------------|
| Net Card      | Wire Netcard                        |
| DHCP Enable   | <input checked="" type="checkbox"/> |
| IPVersion     | IPv4                                |
| IP Address    | 192 · 168 · 1 · 36                  |
| Subnet Mask   | 255 · 255 · 255 · 0                 |
| Gateway       | 192 · 168 · 1 · 1                   |
| Primary DNS   | 186 · 130 · 128 · 250               |
| Secondary DNS | 186 · 130 · 129 · 250               |

Below this is a section titled "Network Testing" with the following settings:

|                 |                          |
|-----------------|--------------------------|
| TCP Port        | 3333                     |
| HTTP Port       | 80                       |
| Mobile Port     | 3334                     |
| MTU             | 1400                     |
| HS Download     | <input type="checkbox"/> |
| Transfer Policy | Quality Preferred        |

At the bottom right, there are three buttons: "OK" (highlighted with a yellow box), "Cancel", and "Apply".



*[sieraelectronics.com](http://sieraelectronics.com)*