


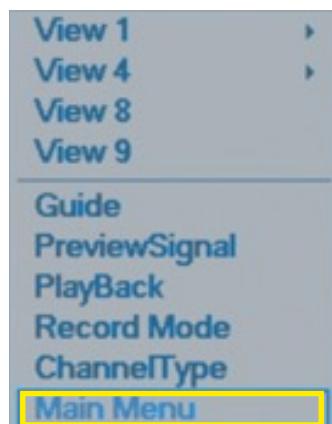


# PAL/NTSC format change

**Quick Help**

**1. Enter the main menu.****2. Enter the system with the user admin.**


Remember that the factory password is siera.

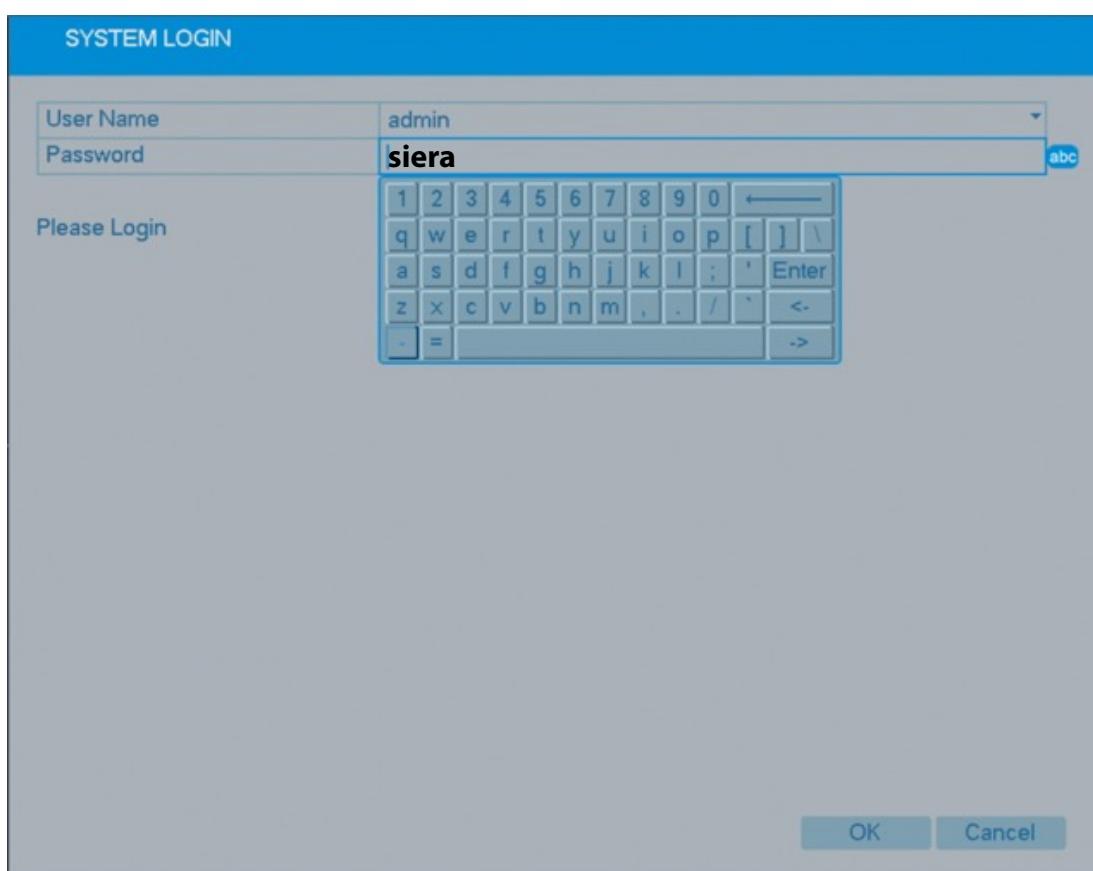


The dialog box has a blue header bar with the text "SYSTEM LOGIN". Below it is a table with two rows:

User Name	admin
Password	siera


To the right of the password field is a small "abc" icon. Below the table is a text input field containing "Please Login". To the right of this field is a virtual keyboard. At the bottom right of the dialog box are two buttons: "OK" and "Cancel".

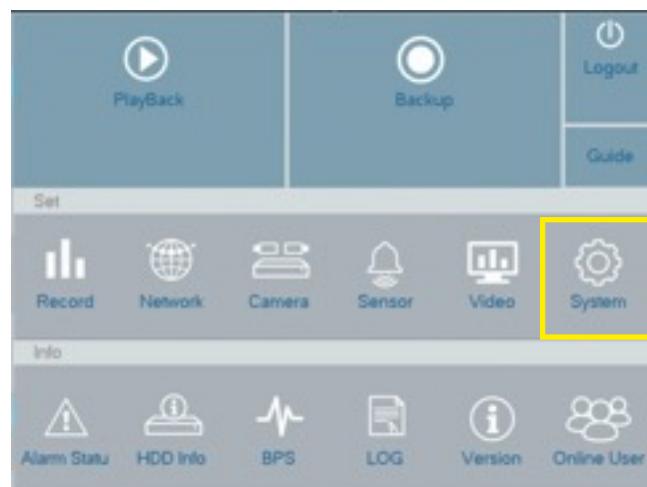**3. Enter "System".**

**4. In video standard, choose NTSC or PAL as appropriate.  
Then press "Apply" and finally "OK".**

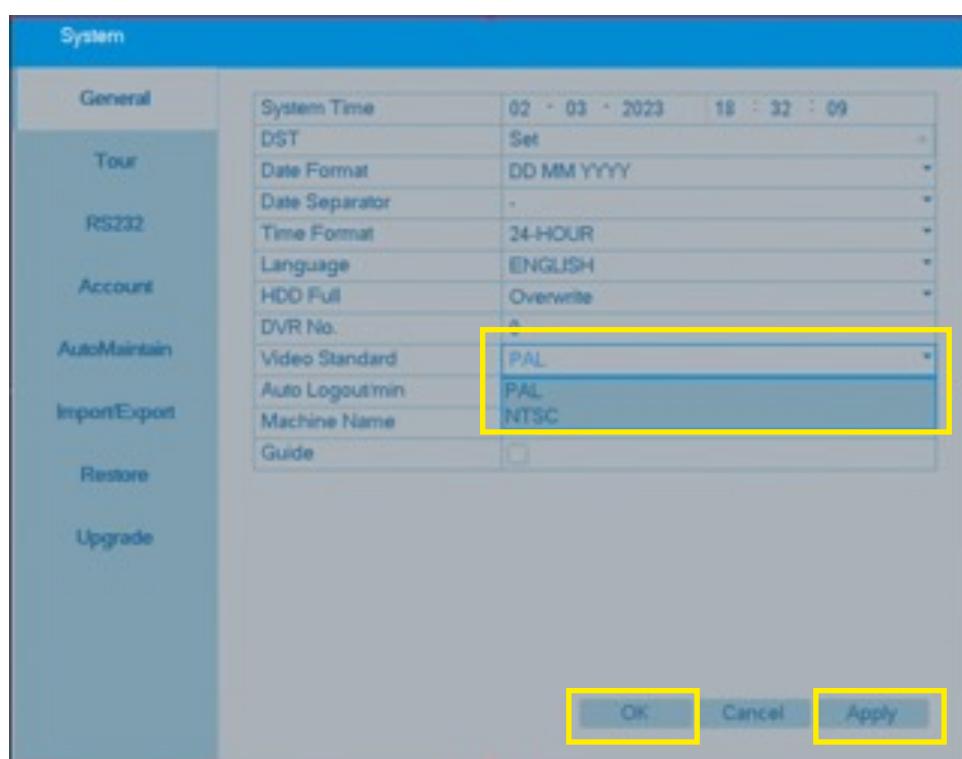

**5. The equipment will request to restart to apply the configuration, select "OK"**

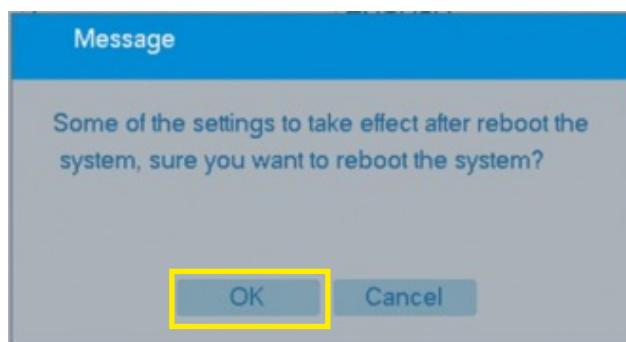



*sieraelectronics.com*