




# Perform PING test to Google from an HVR/NVR/DVR


**Quick Help**

## 1. Enter the main menu.

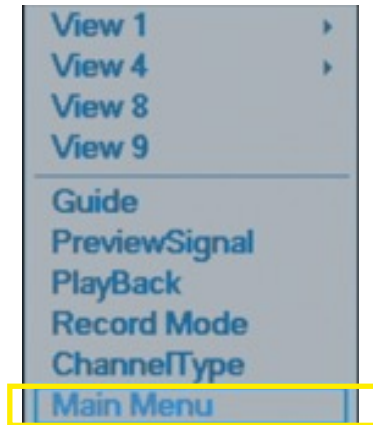


## 2. Enter the system with the user admin.


Remember that the factory password is siera

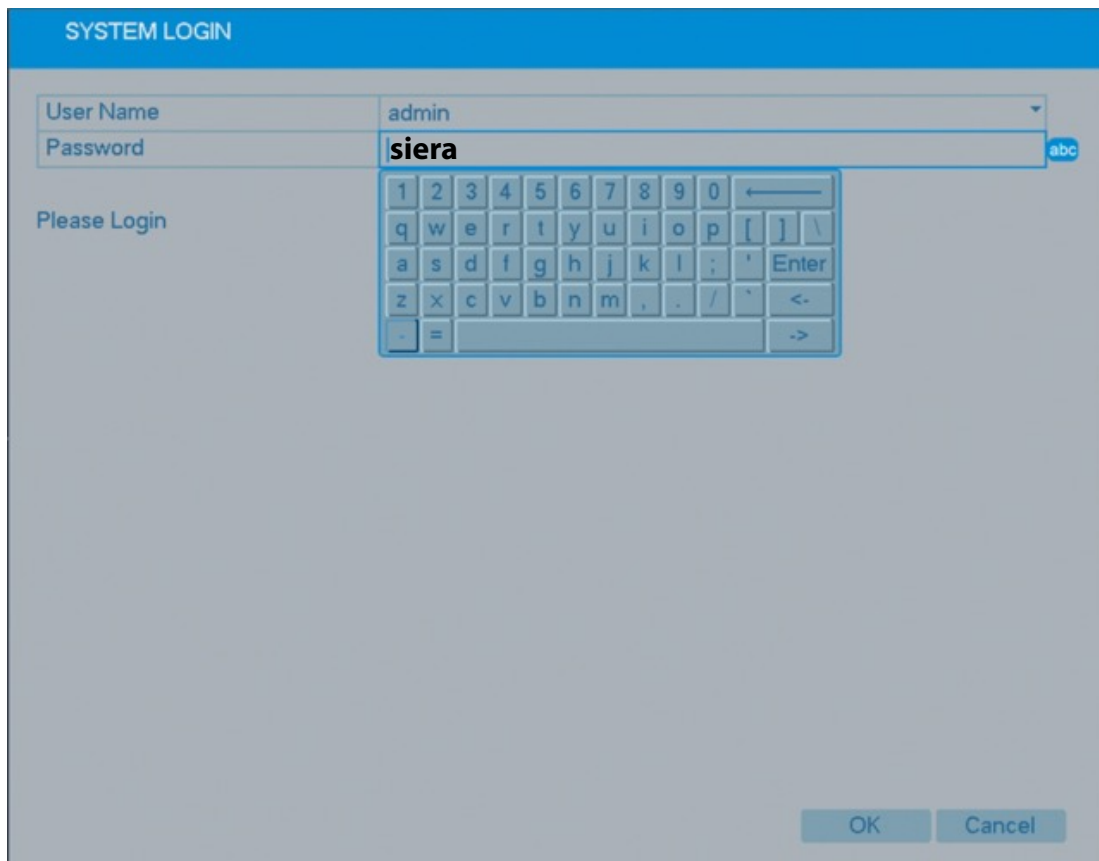


### 3. Enter "Network".

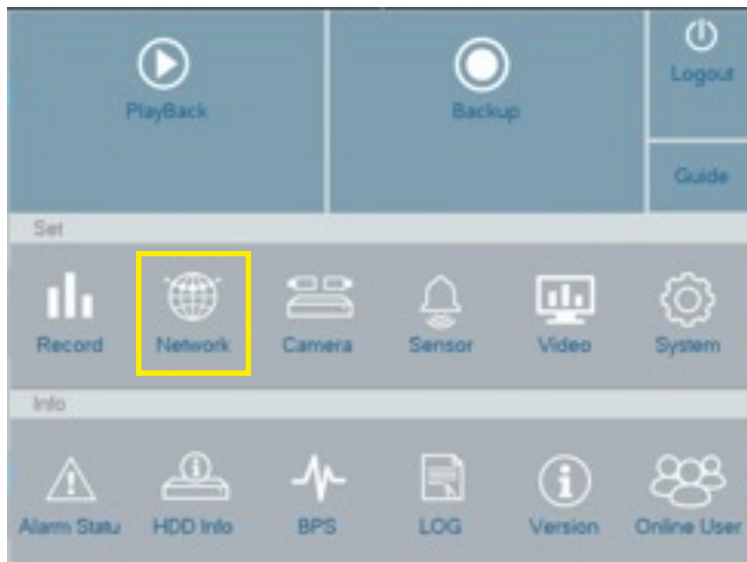


### 4. In "Network" the following options menu will be displayed, where you must select "Network Testing".

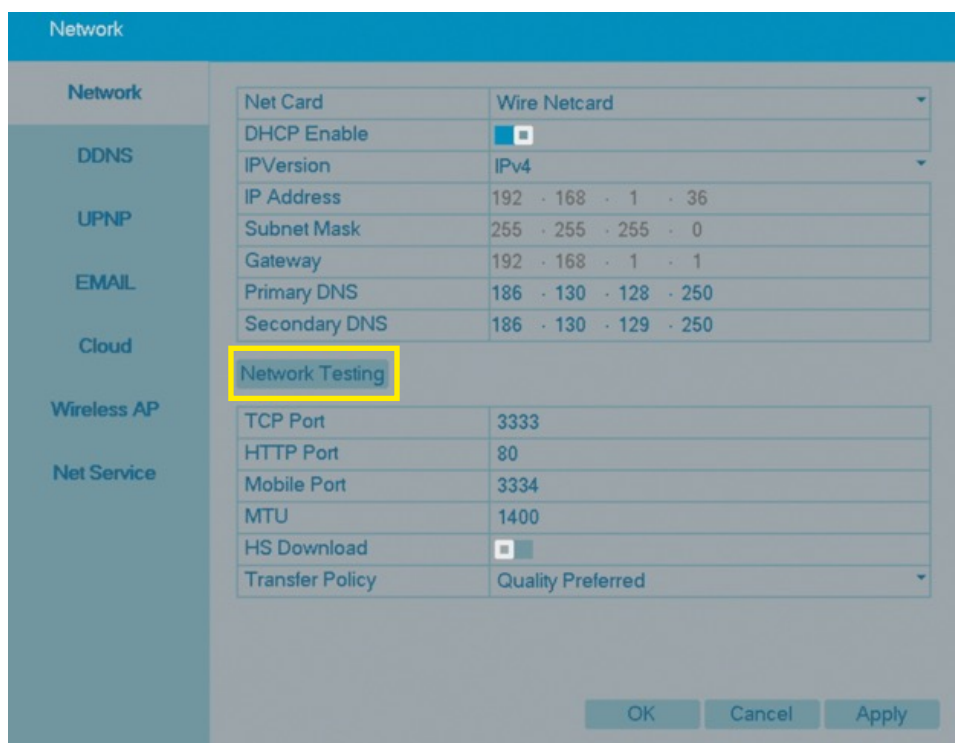

5. The following window will be displayed, where you will place the Google DNS data, 8.8.8.8 and then select "PING" to perform the test.

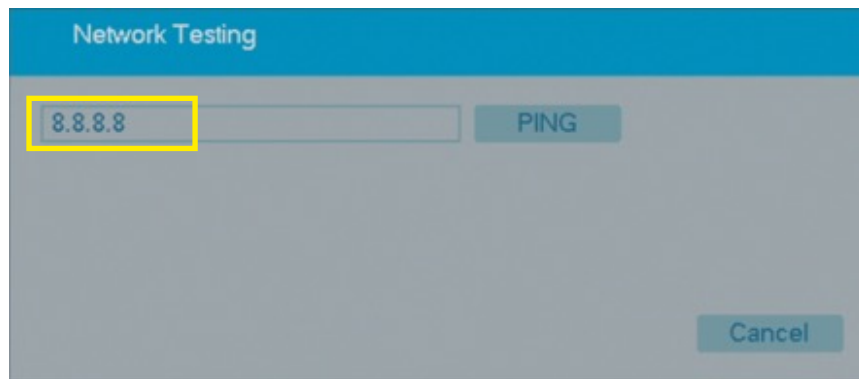

6. If the PING test is correct, the system should return the following message:

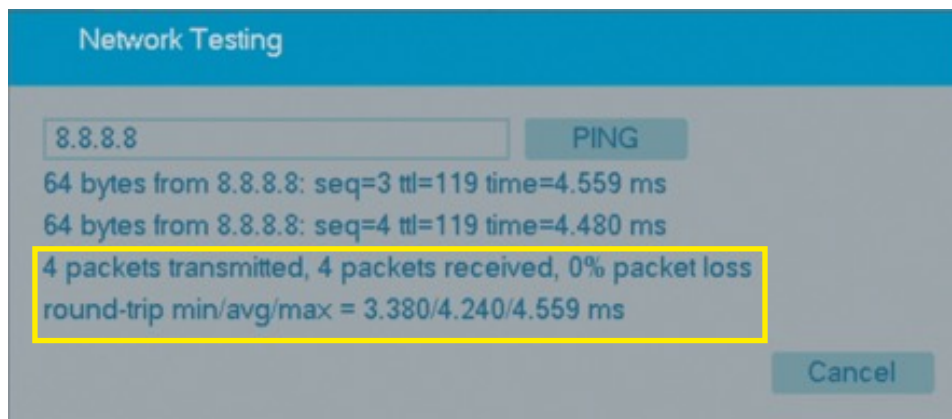



*[sieraelectronics.com](http://sieraelectronics.com)*