

User creation

Quick Help





1. Enter the main menu.

View 1	
View 4	
View 8	
View 9	
Guide	
PreviewSignal	
PlayBack	
Record Mode	
ChannelType	
Main Menu	

2. Enter the system with the user admin.

Remember that the factory password is siera

Password		
	siera	
Please Login	1234567890+	
	qwertyuiop[]\	
	asdighiki; 'Enter	
	z x c v b n m , . / * <	
	د. = .	





3. Enter "Video".



4. Enter "Account".





5. Select "Add User".

General	3	User Name	Group	Status
Tour	23	guest default	user user	Normal Default User
RS232				
Account				
AutoMaintain				
mport/Export				
Restore			Addition	La del Carrano Deslato Linear Deslato Carra
Upgrade	1.000		Add User	a group Delete Oser Delete Grou
15	Mod	iny User		
	Mod	lify Pwd		

6. A window will appear for the creation of users with the following characteristics:





7. When the data load is finished, press "OK".

Uper I	Name	test		
Reuse	eable	2		
Passy	word			
Confin	m			
Memo	0			
GROU	UP	admin		
38		Authority		
1	Shutdown th	le device		
2	Channel Tit			
3	Schedule			
4 1	Backup			
5	HDD Manag	ement		
6	Account			
3.1	Cuaru Sutte			
	Compilant			
100	Class Log			
	Clear Log			
10	 System Opti 			
	Auto Manta	1		
14	General Cor	Ag		
13	Encode Cor	A9		
14	RS232			

8. The system will show the following message, press "OK".





9. The user will be in the list of "How many".

Tour 1 admin admin GUI 2 guest user Normal 3 default user Default User 4 test admin Normal	
Tour 2 guest user Normal 3 default user Default User RS232 4 test admin Account AutoMaintain Image: Second Se	
RS232 Account AutoMaintain Import/Export	
Account AutoMaintain	
Account AutoMaintain ImportExport	
AutoMaintain	
ImportExpert	
advanced and a second se	
Restore	
Add User Add Group Delete User Delete	e Grou
Upgrade Modity User	
Modify Group	





sieraelectronics.com