
 


Installation of “Siera Management Software”

1. Copy the folder “Siera Management Software” to your C:/ path or D:/ path, please don't put it in the desktop.
2. Make sure you login your computer with Administrator role.

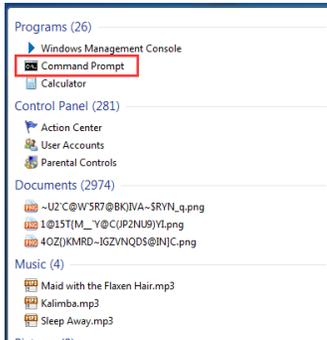


Right click “Command Prompt”, and select “Run as administrator”.
Input “net user administrator /active:yes ”




Note: There are two blank space here: net user administrator active:yes


Then restart your PC and login in your PC by “administrator” rule.

3. Turn off the firewall.
4. Run “srv_install.bat”, then restart your PC.
5. Access to the Service of your PC, and start “Apache Tomcat 6” and “watchdog” manually

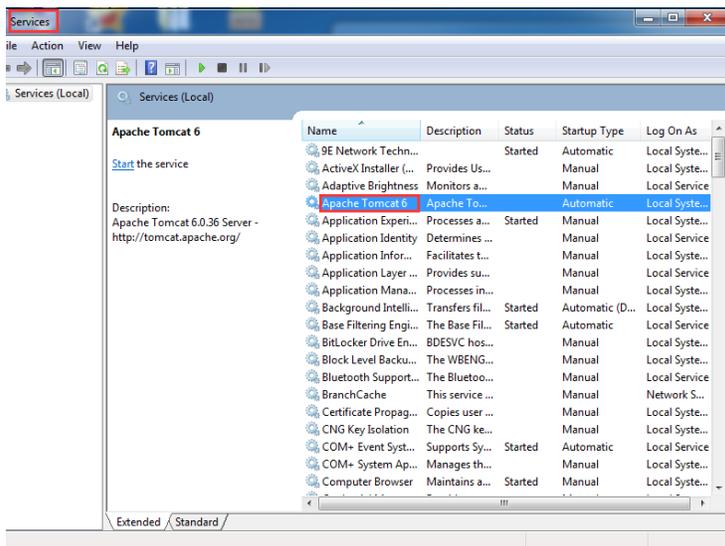

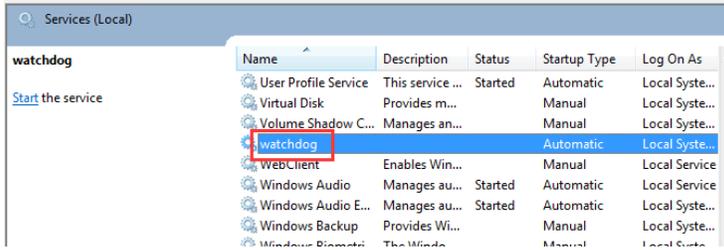

6. Reboot your PC, then access to "bin" folder, and run "cms.exe"
 Username: admin Password:123456
 Then you can access to the management interface.
7. You can also login this management software on another PC. Just copy "cms.exe" and "libmysql.dll" to another PC, then login to the PC which installed management software:

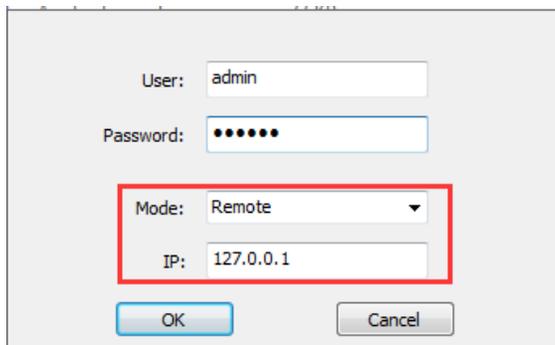


Uninstall:

Run "srv_remove.bat"

How to Register device to management software

1. Outdoor panel (Building No:1 Unit/Door No:1 Device No:1)

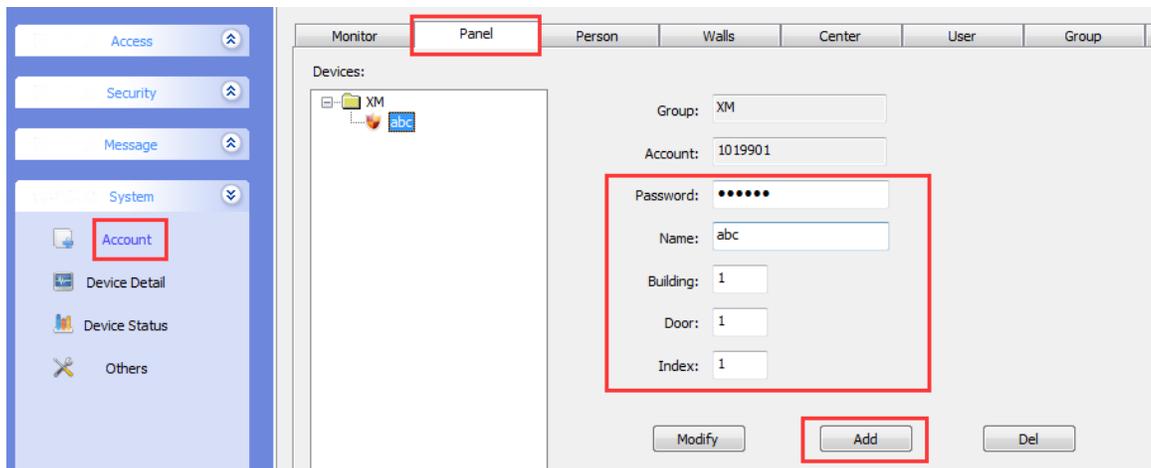

Main	LAN	Device Settings	
Device		BuildNo:	<input type="text" value="1"/>
Access		UnitNo:	<input type="text" value="1"/>
VOIP		No:	<input type="text" value="1"/>
Forward			

Fill management software IP address and login password to below setting:

Main	LAN	LAN Settings	
Device		IP:	<input type="text" value="192.168.15.8"/>
Access		Mask:	<input type="text" value="255.255.0.0"/>
VOIP		Gateway:	<input type="text" value="192.168.15.8"/>
Forward		DNS:	<input type="text" value="211.162.32.1"/>
ExModule		Server IP:	<input type="text" value="192.168.15.200"/>
Advanced		Password:	<input type="password" value="•••••"/>
Phonebook		NTP:	<input type="text" value="198.123.30.132"/>
Default			
Logout			

2. Flat Camera

Access Security Message System Account Device Detail Device Status Others	Monitor	Panel	Person	Walls	Center	User	Group
	Devices:						
	<div style="display: flex;"> <div style="border: 1px solid gray; padding: 5px; margin-right: 10px;"> XM cathy </div> <div> Group: <input type="text" value="XM"/> Account: <input type="text" value="1001010102"/> Password: <input type="password" value="•••••"/> Name: <input type="text" value="cathy"/> Building: <input type="text" value="1"/> Door: <input type="text" value="1"/> Room: <input type="text" value="102"/> Index: <input type="text" value="1"/> </div> </div>						
	<input type="button" value="Modify"/> <input type="button" value="Add"/> <input type="button" value="Del"/>						

Device Settings

BuildNo:

UnitNo:

Floor:

RoomNo:

No:

Sys passwd:

Fill management software IP address and login password to below setting:

LAN Settings

IP:

Mask:

Gateway:

DNS:

Server IP:

Password:

NTP:

3. Indoor Monitor

Monitor

Group: XM

Account: 1010102

Password:

Name: ddd

Building:

Door:

Room:

Building	1	Room	2
Door	1	Device	0
Floor	1	Sync	123456
Server	192.168.15.200		
Password	••••••		



Then you can send the message, add/modify/delete card on management software.