




**TSP 600**  
*Audio Phone*

**User Manual**

For more information visit [www.sieraelectronics.com](http://www.sieraelectronics.com)



# 1. Parts and Functions

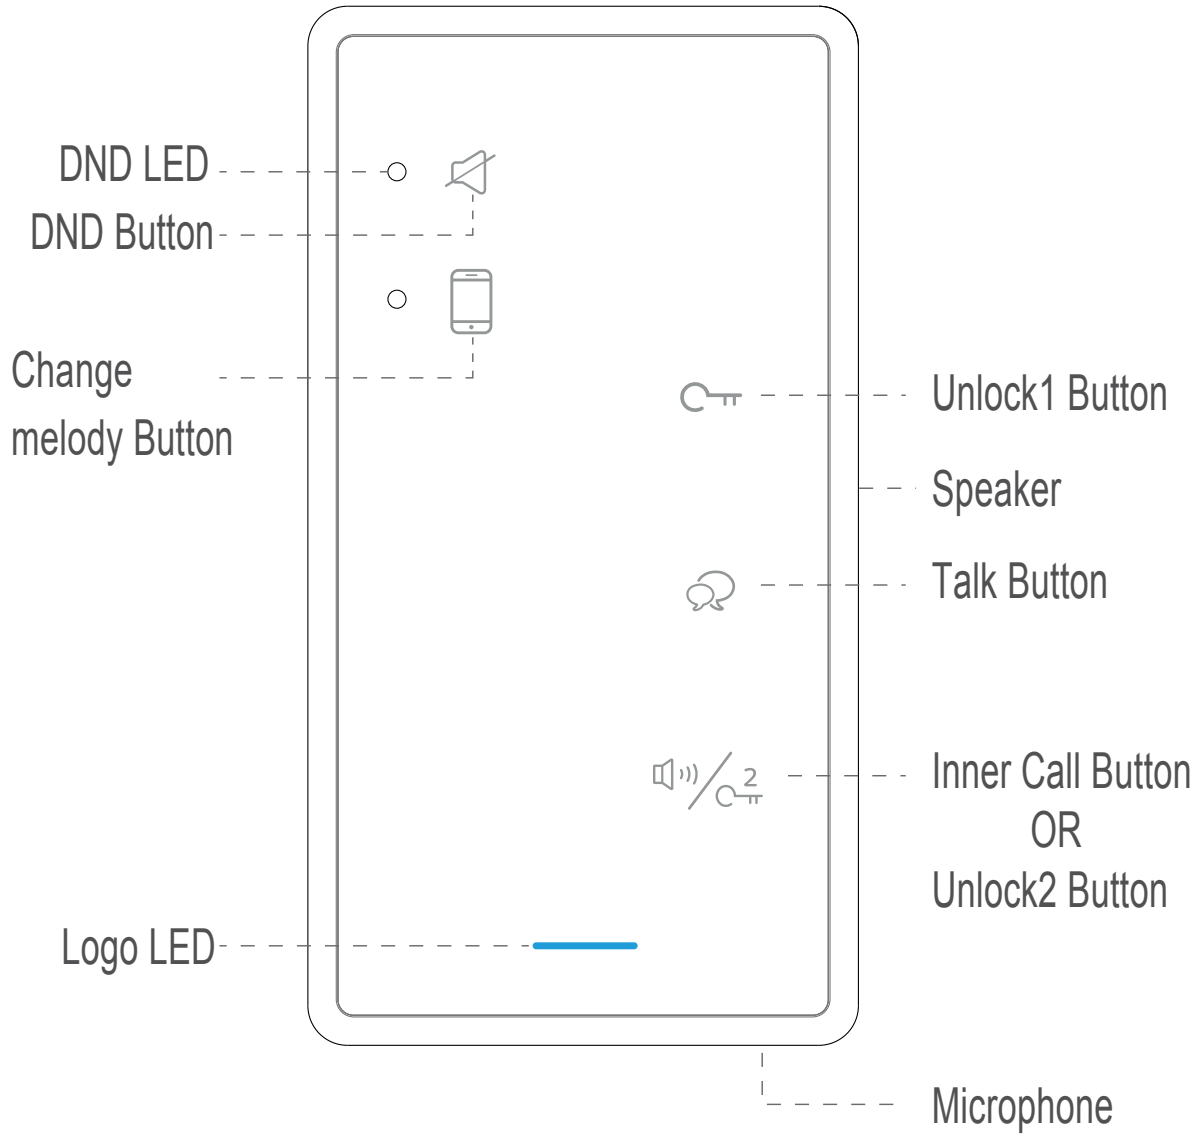



DND button	<ul style="list-style-type: none"><li>- Press DND button, to enable “DND” function with DND LED ON. Press DND button again, to disable “DND” with DND LED OFF.</li><li>- Press and hold the DND button for 3 seconds, to switch to High / Low volume (High by default).</li></ul>
Change Melody button	<ul style="list-style-type: none"><li>- Allows you to change the Melody of the doorbell, intercom, and external doorbell (Press and hold 3 seconds)</li></ul>
Unlock1 button	<ul style="list-style-type: none"><li>- Press to open the gate.</li></ul>
Speaker	<ul style="list-style-type: none"><li>- Send out sounds of ring tones, audios and alarms.</li></ul>
Talk button	<ul style="list-style-type: none"><li>- Start and end a conversation with a guest.</li></ul>
Inner Call Button or Unlock2 Button	<ul style="list-style-type: none"><li>- In standby mode, press the button to call the intercom connection with Guard Unit.</li><li>- In talk mode, press to open the second input.</li></ul>
Microphone	<ul style="list-style-type: none"><li>- Transfer sound from the uniphone to the door station</li></ul>
Logo LED	<ul style="list-style-type: none"><li>- Light up the logo.</li></ul>

## 2. Specification

Power Supply:	DC20~28V
Power Consumption:	standby 6mA, working 60mA
Working Temperature:	-15°C ~ +55°C;
Wiring:	2 wires, non-polarity
Dimension:	150(H)X80(W)X13.5(D)mm



### 3. User settings


#### 3.1 Ring Volume

Press and hold the **DND button** for 3 seconds, to switch to High / Low volume (High by default).

#### 3.2 Ring Tone

Press and hold **Change Melody button** for 3 seconds, to switch to the next group of ringtones.


### 4. Installer settings by unlock1 button

setup item	In standby, Press “  ” button to enter to setup mode	
	Press Time	LED Indicator
Address Setting (Default: 01)	6s	“DND” Led --flashing “Melody” Led--flashing
Call-back Test/ Check the address of TSP600	3s	“DND” Led --flashing
Set Master / Slave (Default: Master)	9s	“DND” Led --flashing “Melody” Led--flashing
Regret and Undo previous settings	12s	“DND” Led --flashing “Melody” Led--flashing “DND”, “Melody” Led--turn off

### 5. Restore Factory Setting

1. Re-power, and during 10s, press and hold the “Unlock” button for 12s.
2. If sounds long “BEEP+” in one time, TSP 600 will be restored to the factory setting.

## 6. Basic Connection

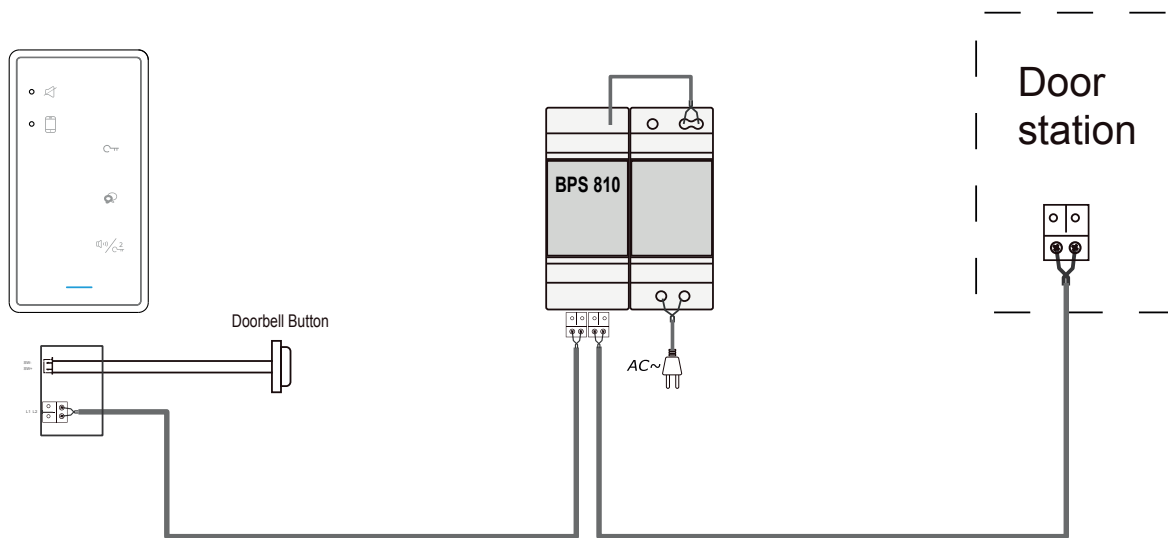

## 7. Precautions

- The installation and handling of these devices must be carried out by authorized personnel.
- The wiring must run at least 40cm away from any other wiring.
- The audio phone should never be placed near or over a radiator or heat register and should not be placed in a built-in installation such as a bookcase unless proper ventilation is provided.
- All parts should be protected from violence vibration. And not allow to be impacted, knocked and dropped.
- Please do the cleaning with soft cotton cloth, please do not use the organic or chemical detergent. If necessary, please use pure water or dilute soap water to clean the dust.
- Do not open the device in any condition, please call the administrator if needed.



*[www.sieraelectronics.com](http://www.sieraelectronics.com)*

9040340

Product may vary from description.

Designed by Siera / Assembled in PRC.  
Siera is a trade mark of the Siera Holding Group.