




PTZ DOME configuration in an HVR/DVR using coaxial cable.


Quick Help

1. Enter the main menu.

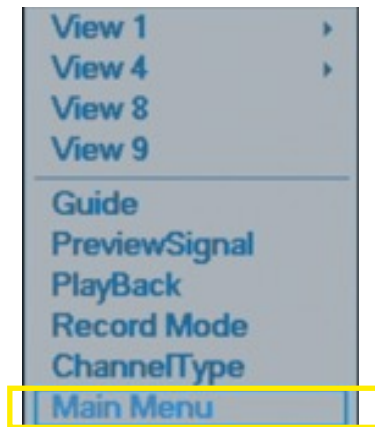

2. Enter the system with the user admin.


Remember that the factory password is siera

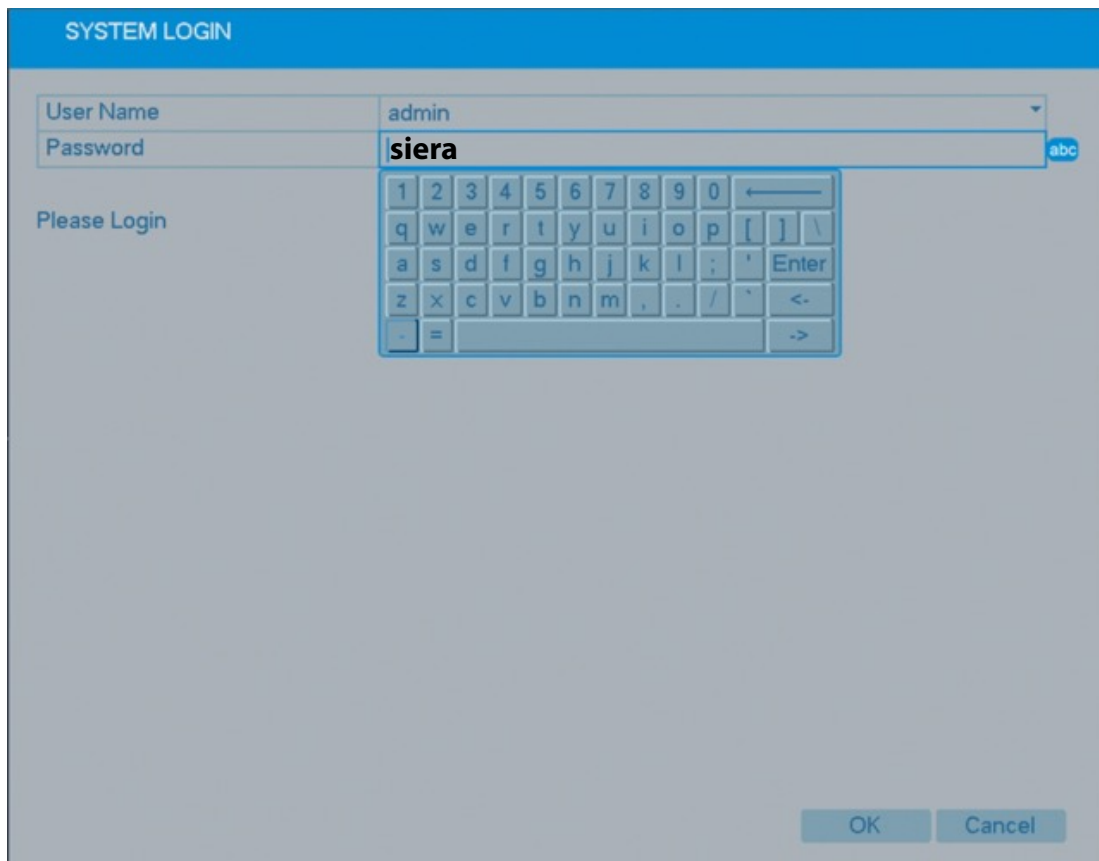

3. Enter "Video".



4. Enter "PTZ Config".

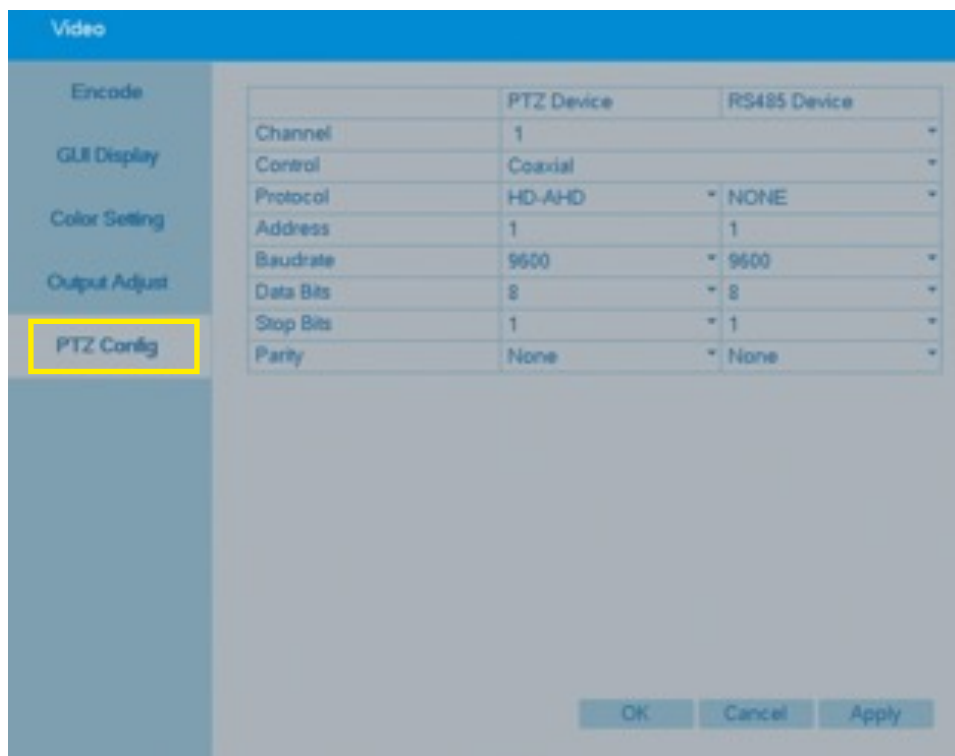

5. Select the channel where the camera to be programmed is connected and the parameters according to the characteristics of the camera.

Control	Coaxial	
Protocol	HD-FH	NONE
Address	1	1
Baudrate	9600	9600
Data Bits	8	8
Stop Bits	1	1
Parity	None	None

Protocol to use,
in this case "Coaxial"

Communication protocol,
this will depend on the
brand and model of the
camera and its configuration.
(AHD/TVI/CVI)

6. With these configurations made, you will be able to command the camera.



sieraelectronics.com