


# VSP 898

Door Station




User Manual

# 1. Parts and Functions

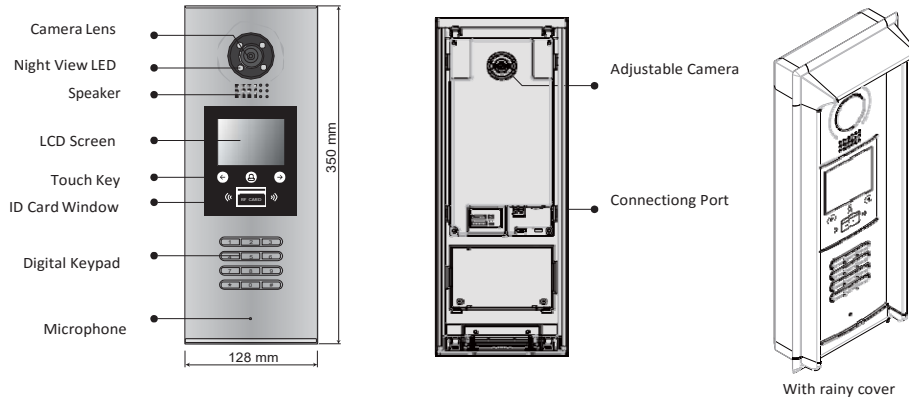


# 2. Terminal Descriptions

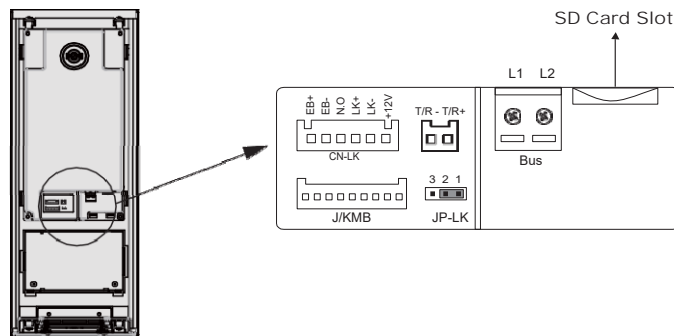


- **+12V:** 12VDC power output.
- **LK-(GND):** Power ground.
- **LK+(COM):** Common contact of the Relay.
- **NO.:** Normally open contact of the Relay
- **EB+:** Exit button connection port.
- **EB-:** Exit buton connection port.
- **JP-LK:** For electronic lock safety type setting (refer to Door Station Lock Connections).
- **T/R-:** USB-RS485 communication terminal negative.
- **T/R+:** USB-RS485 communication terminal positive.
- **Bus(L1,L2):** non-polarity bus line.

### 3. Door Station Mounting


#### Surface mounting

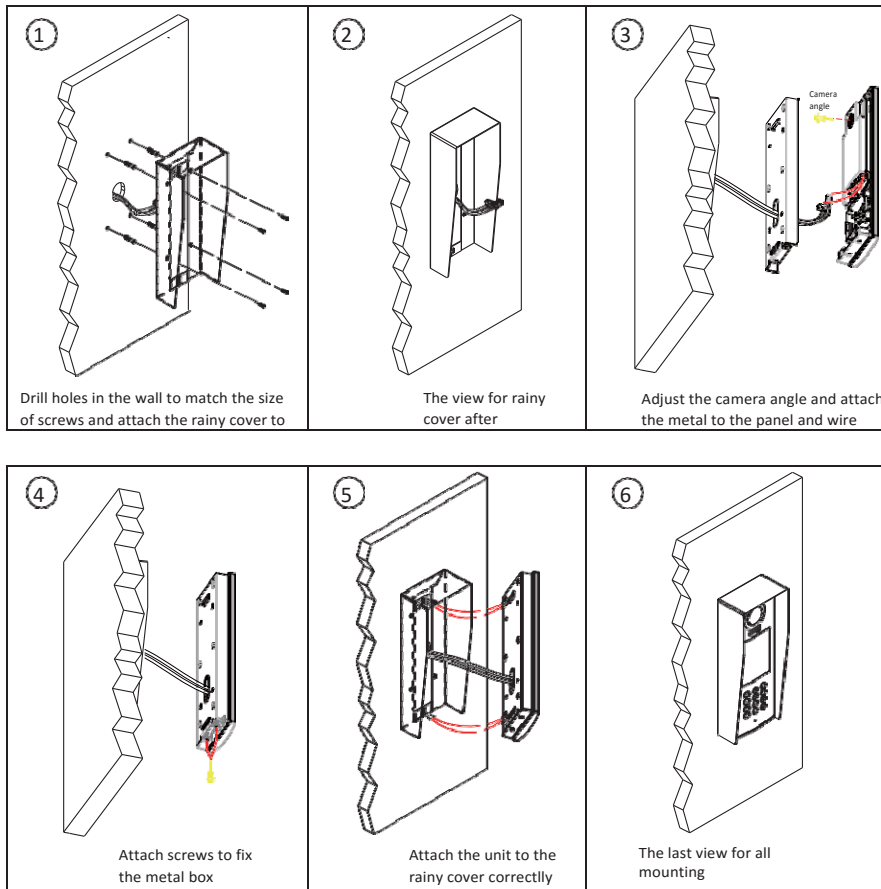

## Flush mounting

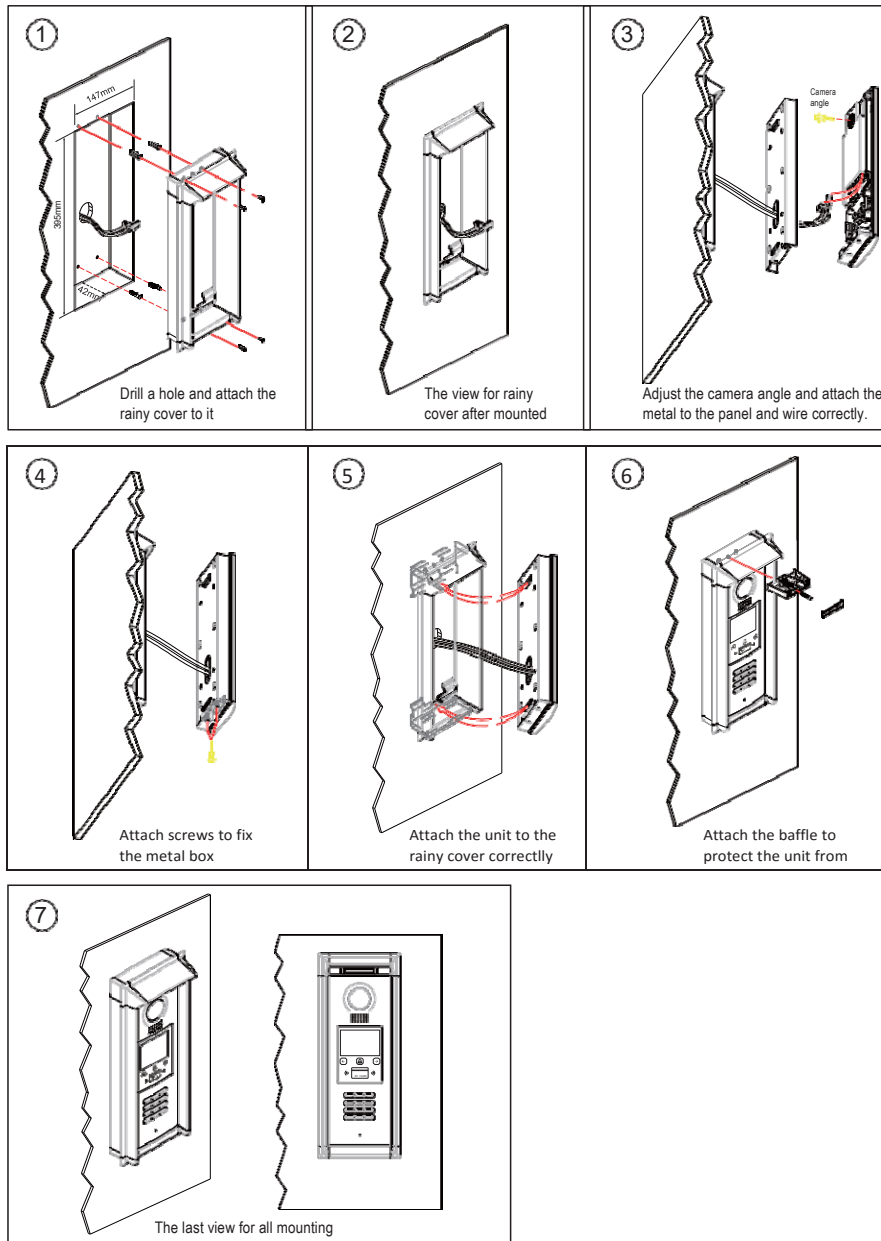

## 4. System Connection

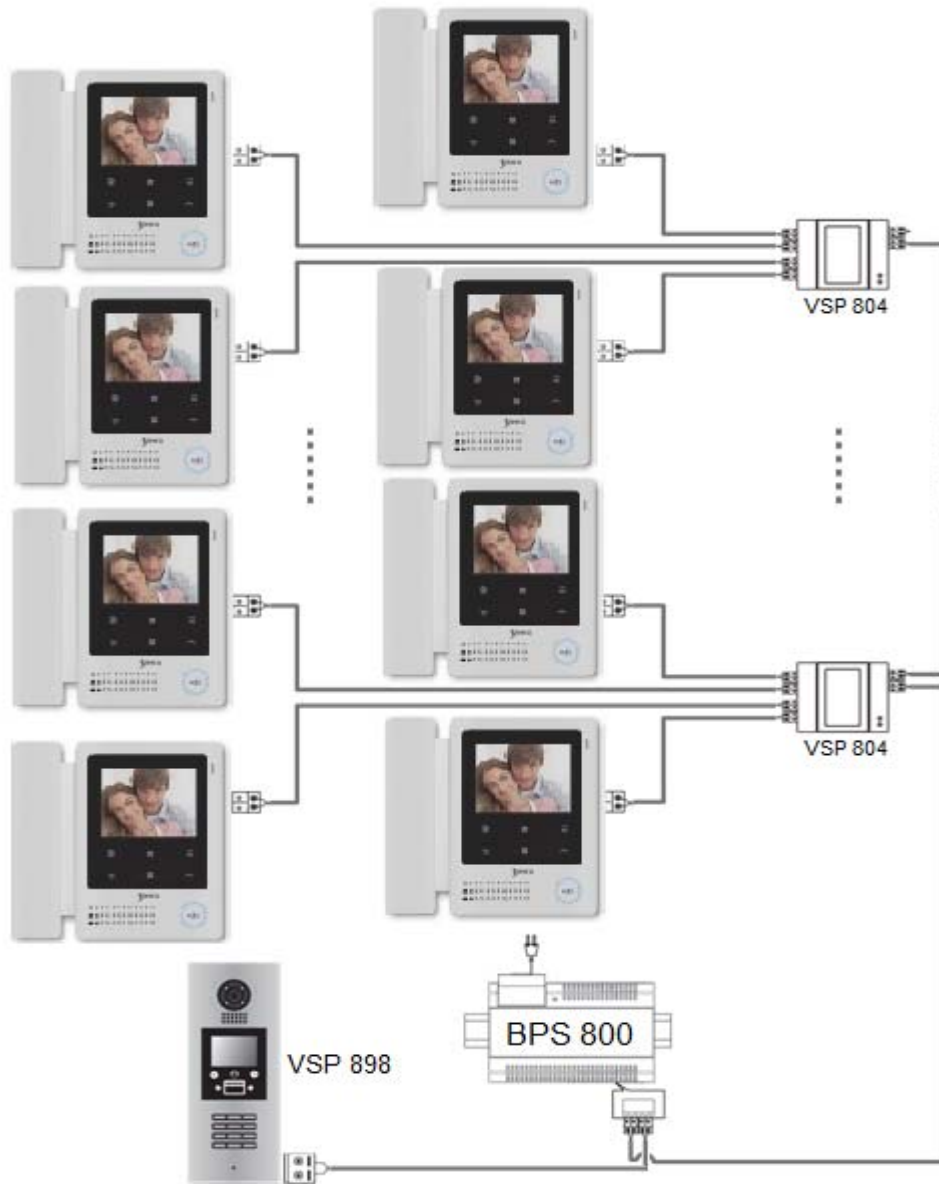


## 5. Door Lock Connections

### 1. Internal Power Supply Mode


Use the power of the system to supply for the electronic lock, so that the lock can be connected to the door station directly, without an additional power supply for the electronic lock. Note that the door station can only output 12Vdc power, therefore the kind of lock is limited.

- The rated power of the lock must be less than 12Vdc 300mA when using internal power supply mode
- The GND must connect to the negative of the lock, and the COM connect to the positive.
- Jumper set to 1-2 position for Power-off-to-Unlock safety type (*Normally closed mode*); set to 2-3 position for Power-on-to -Unlock type (*Normally open mode*).
- If different unlocking time is needed to be configured, change the *Unlock Timing* on door station. (In debug state, press [1 #] --> [1] Installer Setup--> [2] Unlock Timing)

#### A. Connection for Power-on-to-Unlock type:

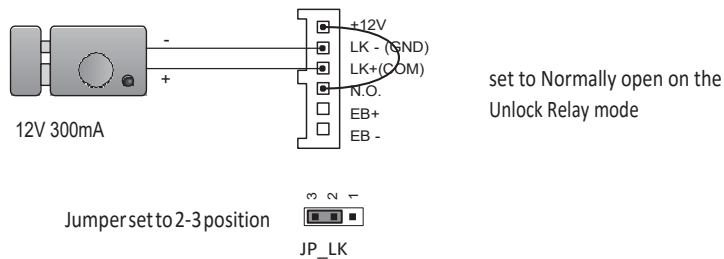

#### B. Connection for Power-off-to-Unlock type:

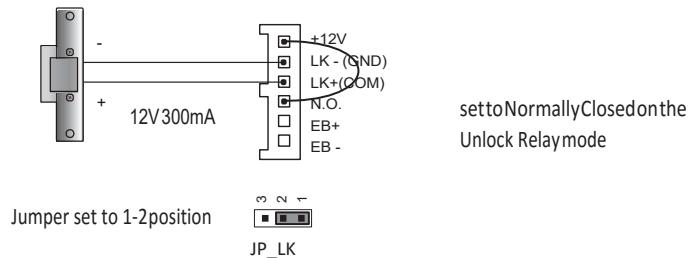


## 2. External Power Supply Mode


When the electronic lock is over 12 Vdc, additional power supply for the lock is needed.

- The power supply for the lock must be less than 48Vdc 1.5A.
- The Jumper must be removed when using external power supply. The default setting is Power-on-to-Lock type (*Normally open mode*), if use Power-off-to-Lock type, change the Unlock Relay mode to *Normally closed mode*.
- If different unlocking time is needed to be configured, change the *Unlock Timing* on door station. (In debug state, press [1 #] --> [1] Installer Setup--> [2] Unlock Timing)

### C. Connection for Power-to-Unlock type:

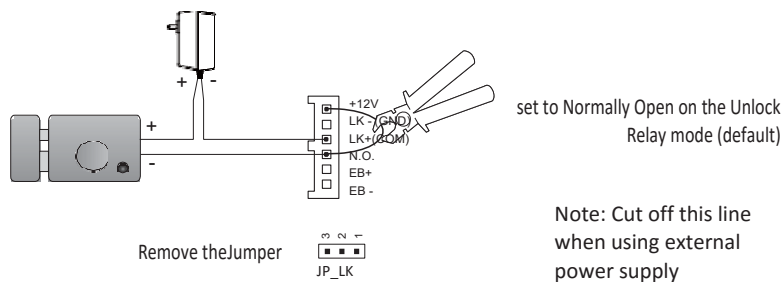

### D. Connection for Power-off-to-Unlock type:

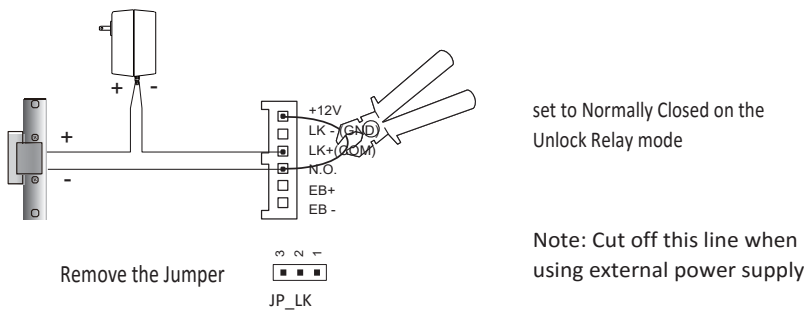

## 6. Door Station Configurations

### 1. About room code(address):

Room Code (also called room address) is a code assigned to each monitor, to identify different monitors; each monitor have a unique room code in one building's room Code is stored in each Monitor's inner EEPROM memory, and does not lose even the monitor is power off.

### 2. About Debug State:

The Debug State is your starting point for using all the applications on VSP 898.



When Door Station is in standby, press '#' key

input '9008', then input the Admin Code. (66666666 by default)

Debug State menu is launched

Press "2#" to exit out the debug state.

### 3. About Debug Tools:

During working at Debug State, press "1#" to enter tools page, Debug Tools overviews is shown as below:

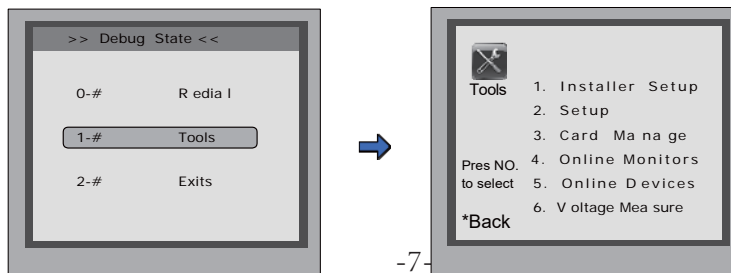




Table 1:

Item	Submenu
<b>1. Installer Setup</b>	1. ID Code [0] 2. Unlock Timing [01] 3. Unlock Output [0] 4. Monitor Timing [600] 5. Doorplate Mode [0] 6. Waiting Timing [040] 7. Talking Timing [090] 8. Installer Code ... 9. Default ...
<b>2. Setup</b>	1. Language [0] 2. Tone Select [01] 3. Tone Volume [3] 4. Unlock Code [1111] 5. Work Mode [0] 6. Clock ... 7. Setup Code ... 8. About ... 9. Default ...
<b>3. Card Manage</b>	1. Add Card ... 2. Delete By Card 3. Delete By M.code 4. Cards Information 5. Format
<b>4. Online Monitors</b>	To search the online monitors,input the monitor code number to search
<b>5. Online Devices</b>	To search the online door stations.Max.4 door station can be searched
<b>6. Voltage Measure</b>	To check the voltage of the monitor,note that the monitor must be online.

**Basic Tools Detail:**

Table 2(Installer Setup):

Item	Description	Factory set
ID Code	If only one door station is installed in this building, set to 0; If multi door stations are installed, primary door station must be set to 0, and other slave door stations must be set from 1 to 3. Note that max. 4 door stations are available in one building	[0] Single
Unlock Timing	To set the time that how long the door keeps open when door is released. Range Fromm 01	[01] 1 seconds
Unlock Output	To set the unlock mode to match the corresponding lock. Range from 0 to 1. 0: Power-on-to-Unlock Mode (Normally Open Mode) 1: Power-off-to-Unlock Mode (Normally	0
Monitor Timing	To show the monitor time, Range from 6s to 600s	600s
Doorplate Mode	To set the calling mode. If set to 0, it's the auto mode, that means the calling will be activated directly after inputting 2 digits' code. If set to 1, it's the manual mode, that means you should press "#" button to activate the calling	[0] Auto mode
Waiting Timing	To show the calling wait time, Range from 6s to 600s	40s
Talking Timing	To show the limitation time of talking, Range from 6s to 600s	90s
Installer Code ...	To change door station administrator code	[66666666]
Default ...	Note this operation is irreversible. Once restore is activated, all parameters will return to factory default setting except the information of access	

Table 3(Setup):


Item	Description	Factory set
Language	reserved.	0
Tone Select	Select the chime of Door Station in calling wait state.	01
Tone Volume	Adjust the tone volume for door station in calling. Range from 01~15	3
Unlock Code	To change unlock code in Common Code Unlock mode, in 4-digits format. 1111 is the default unlock code.	1111
Work Mode	0: Standard work mode; 1: DJ work mode; 2: Router work mode;	0
Clock ...	To set date and time. Date format: if set to 0, date format is DD/MM/YY, if set to 1, date format is MM/DD/YY. Time format: if set to 0, time format is 24-hour standard. If set to 1, time format is 12 hour standard.	
Setup Code	To change the Program Code.	[88888888]
About ...	1. Hardware version---To show the Door Station (including ACS) hardware information 2. Software version ---To show the Door Station (including ACS) software information 3. Manufacture Date---To show the manufacturing date 4. Dialing Counts---To show the call operation counts 5. Calls Counts---To show the established calling counts 6. Unlock Counts---To show the unlock operation counts	
Default ...	Restore all Setup parameters to factory default setting. Please note that this operation is an irreversible	

Table 4(Card Manage):

Item	Description	Factory set
Add Card ...	To add the user card	
Delete By Card	To delete card by user card	
Delete By M.code	To delete card by room code	
Cards Information	To show the informations about cards	
Format	To format informations about cards	

**4. How to use code unlock function:**

Please refer to the following operations:

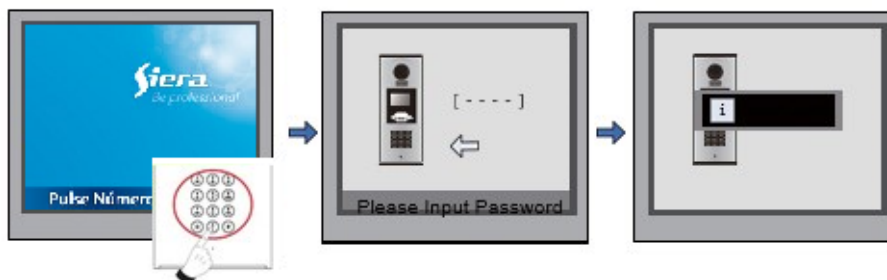


When the Door Station is in standby, Press “#”

Input 4 digits Unlock Code directly

If verified correctly, door open

## 5. Change Unlck Code:

If door station runs as Debug State, you can press “1#” to activate Tools Menu, then select “2” to enter setup page, then select 4 item. If it runs as Normal State, follow these steps:

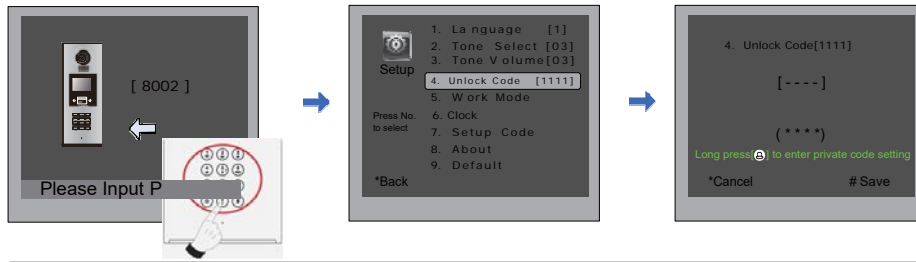


Press “#”, Input “8002”, then input Setup Code or Admin Code(88888888 or 66666666 by default)

Press “4” to enter unlock code item.

Input 4 digits number, then press “#” to update

At this time, you can set the private unlock code, follow these steps:

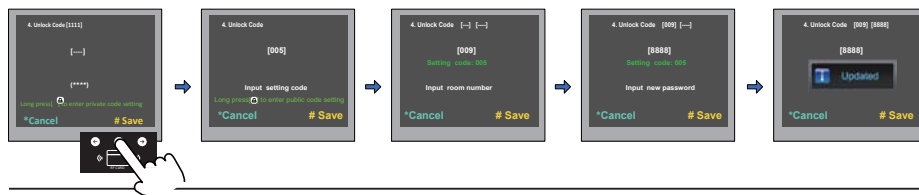

Long press button.

Input setting code(001~300), then press “#” to save.

Input room number, then press “#” to save.

Input new password, then press “#” to save.

## 6. User Card Management:


This section explains how to configure the key fob function on VSP 898, The key fob is used to open the lock. Total 320 key fobs can be registered with one door station. When swiping the fob to the door station, the distance must be less than 3 centimeters.

Key Fobs must be registered on the Door station that can be used to open the door.

### Register the Key Fobs:

All the registered key fobs are called User Cards/User Key Fobs. New fobs/cards need to be registered one by one to the Door station to become a valid User Card/User Key Fob; and every User Card/User Key Fob is related to a certain Monitor Address (Flat code).

When the Doors station is standby, press [#] --> [9008] -->Password ([66666666 by default]) to get into the Debug Mode Menu, then Press [1 #] --> [3] Card Manage -->[1] Add Card to get into the Add Card page. Please see the followings.

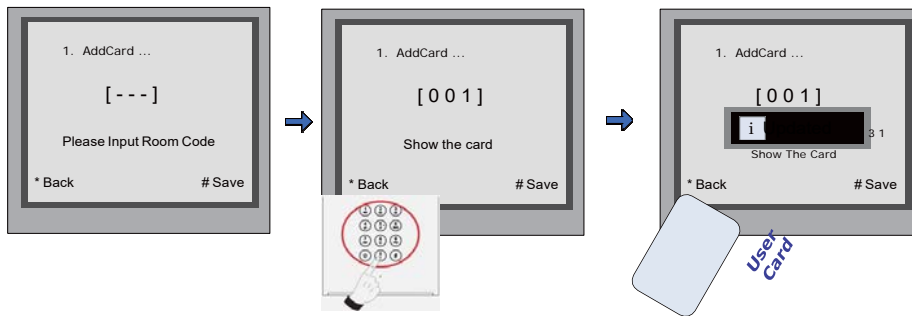

Enter Add Card menu,  
and Room Code is  
asked.

Input Room Code

Read the card to  
be authorized


**Delete user cards:**

Registered User Cards/Key Fobs can be deleted from the Door station, once doing the delete operation, the card/key fobs cannot open the door anymore. They can also be re-registered again to become a valid User Card/User Key Fob. There are two ways to delete User Cards/ User Key Fobs:

1. Delete by card: show the unwanted card(s) when the Door station is in Delete Card Mode
2. Delete by room number: delete all the registered User Cards related to that room number.


### Delete By Card:

In Debug State, Press [1 #] --> [3] Card Manage --> [2] Delete By Card to enter Delete by Card page.as shown on the right, then show the cards you want to delete one by one.

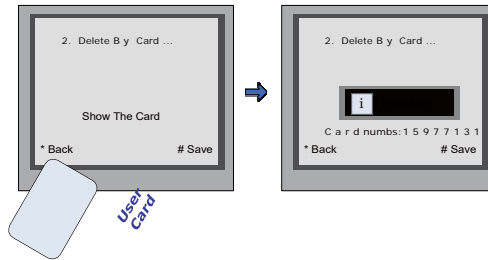


### Delete by Room Number:

In Debug State, Press [1 #] --> [3] Card Manage --> [3] Delete By M. Code to enter Delete by M. Code page.as shown on the right, then Input the Room Code, press “#” to confirm; all associated cards will be deleted.

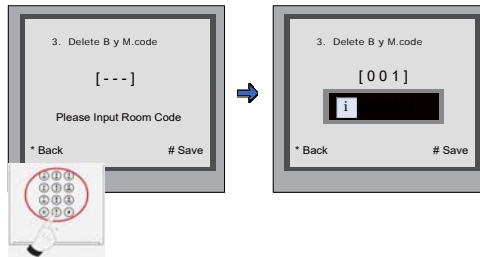


### Card information:

Enter Card Information page, and the screen will display the authorized User Cards count, and card read access events count.

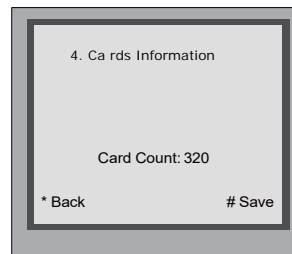

### Format:

Enter Card Format page, a password will be asked, input 8 digits installer password (66666666 by default), then press" #" key to save, format operation is activated. All card information will be cleared.

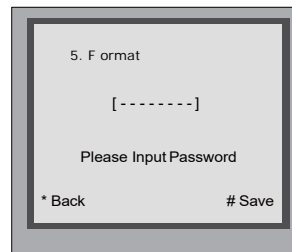



## 7. Specification

- Power supply: DC24V
- Camera Lens: 1/4 ACS 4T image sensor with DSP processor
- Power consumption: Standby 33mA; Working status 157mA.
- Screen: 3.5 inch TFT
- Resolution: 320(R, G, B) X240 pixels
- Video signal: CCIR/EIA Optional
- Protection Grade IP 42
- Wiring: 2 wires, non-polarity
- Dimension: 350(H)×128(W)×46(D)mm