



# Setting the sensitivity of motion detection


**Quick Help**

## 1. Enter the main menu.




## 2. Enter the system with the user admin


Remember that the factory password is siera.

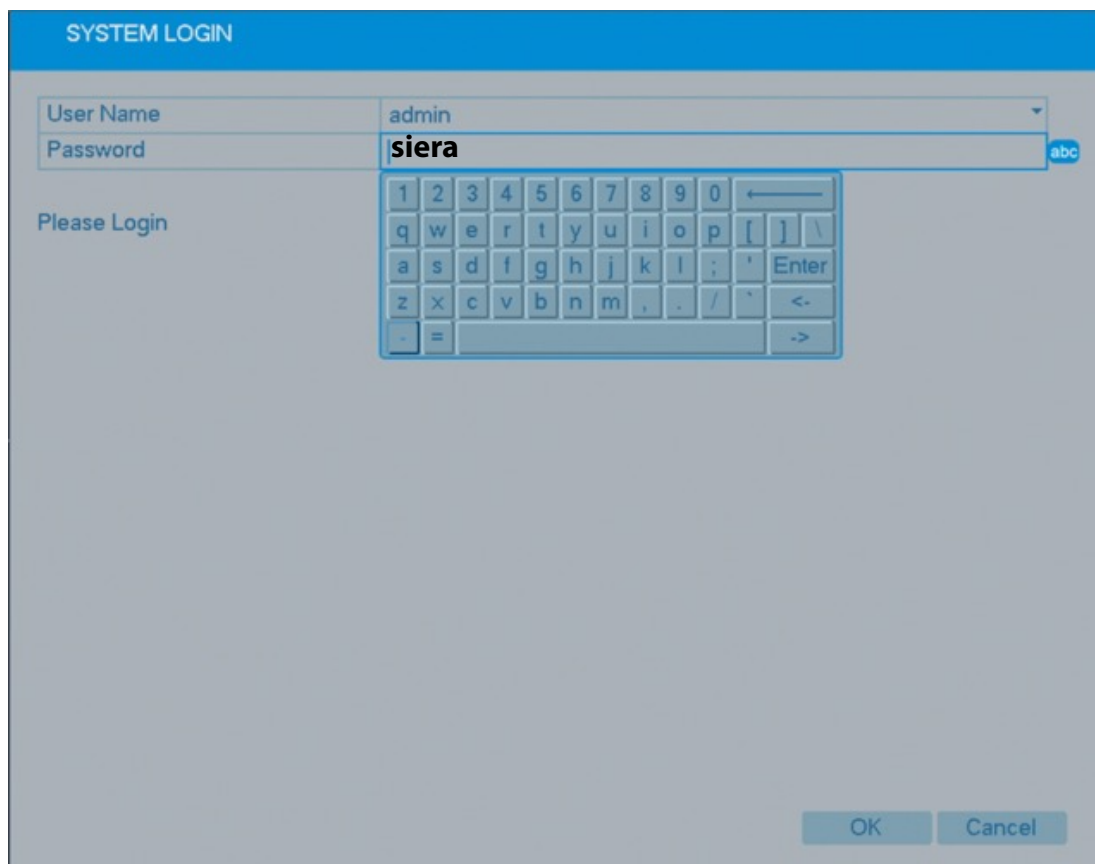

### 3. Enter "Sensor".

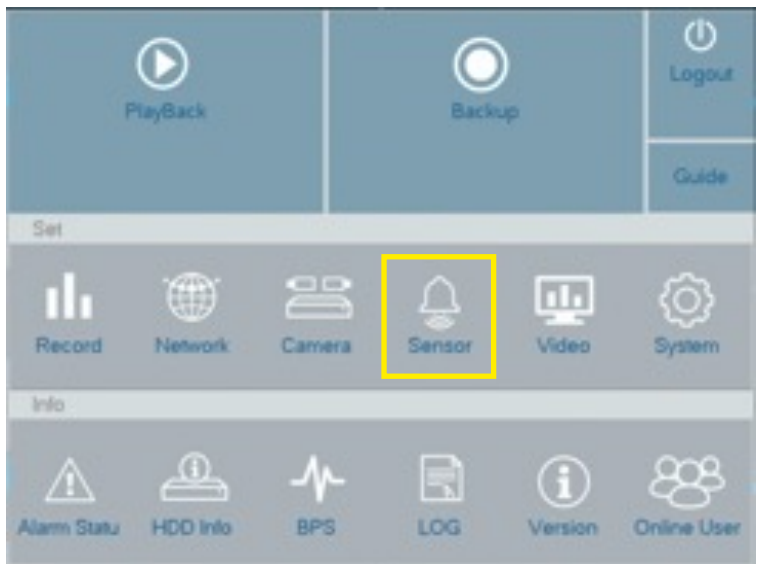


### 4. In "Detection" you can configure and adjust the motion detection of the cameras.

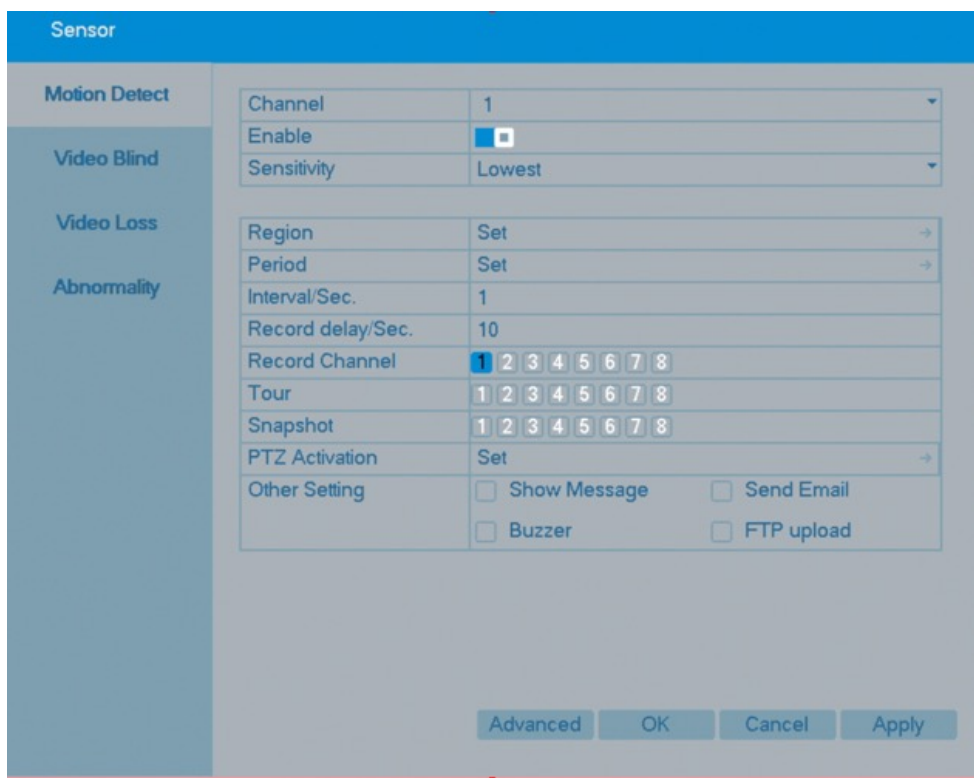

- **Channel:** Select the channel or channels to configure.
  - **Enable:** You can enable or disable this function.
  - **Sensitivity:** Determines the sensitivity of the detection. This is associated with the number of pixels that must be modified to generate an alarm.
  - **Region:** Auqui will be able to shade the area where the movement detection will be carried out.
  - **Period:** Auqui will be able to configure an agenda for the motion detection to be activated.
  - **Interval/Sec.:** Indicate the pre-recording time of the video.
  - **Record delay/Sec.:** Indicate the post-recording time of the video.
  - **Record Channel:** Indicate the channel or channels that will be recorded when performing the motion detection of the channel to be configured.
- NOTE:** if you select "ALL" in the "Channel" selection, this configuration will be copied to all channels. Common mistake that when any channel detects movement, it only records channel 1.
- **Tour:** if the tour is enabled in the DVR/HVR/NVR view, when generating an alarm detection in the channel. A tour will automatically be made between the selected channels.
  - **Snapshot:** when detecting movement, an image capture will be highlighted.
  - **PTZ Activation:** to place a PTZ camera in a preset or tour when movement is detected on this channel.
  - **Other settings:**
    - **Show Message:** if you want a message to be displayed on the equipment screen when movement is detected.
    - **Send E-mail:** if you want it to send an email when motion is detected.
    - **Buzzer:** if you want the equipment to beep when it detects movement.
    - **FTP upload:** if you want it to record in an FTP folder when motion is detected.

## 5. After making the adjustments, click on "Apply" and then "OK".

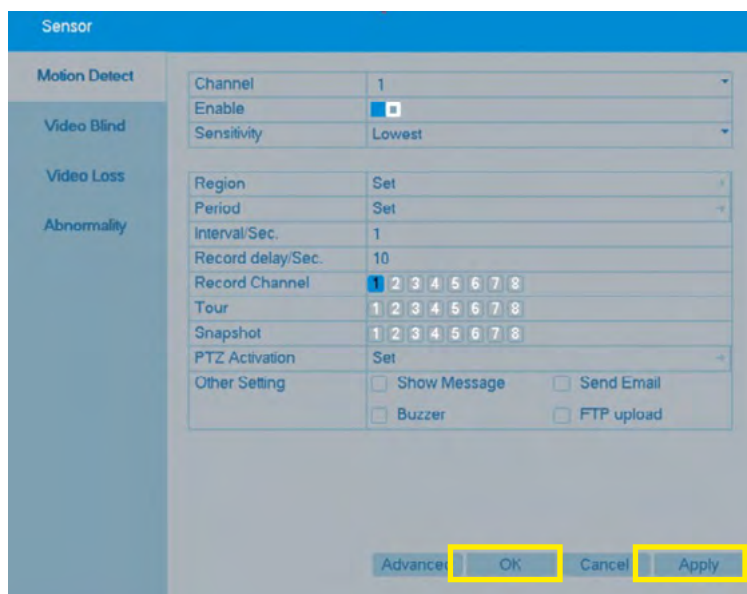



*[sieraelectronics.com](http://sieraelectronics.com)*